

MAINTENANCE INSTRUCTIONS

EN

Translation of the original instructions

PASCAL SERIES

Rotary vane pumps 5 to 21 m³/h

Chemtech Scientific provides access to this content as a courtesy.
We do not own the content contained in this document.
All rights and credit go directly to its rightful owners.
www.chemtechsci.com
Call us at: 484-424-9415



Rotary vane pumps

Dear customer,

This Maintenance instructions is intended for customers of the Pfeiffer Vacuum Company. It describes the product maintenance operations which can be performed by the user on the product concerned. This documentation must be used together with the operating manual for the product of the same name.



Maintenance

| | |
|---|-----------|
| Safety instructions for maintenance | 3 |
| Tools and consumable products | 4 |
| Replacement of external shaft seal..... | 7 |
| Disassembling the pump..... | 8 |
| Cleaning components..... | 13 |
| Replacement of shaft seals | 14 |
| Reassembling the pump..... | 15 |
| Service..... | 19 |

Nomenclature

| | |
|------------------------|----------------|
| Spare parts lists..... | N - 1 à N - 23 |
|------------------------|----------------|

CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in property damage.

 **CAUTION**

Indicates a potentially hazardous situation which, if not avoided, could result in moderate or minor injury. It may also be used to alert against unsafe practices.

 **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or severe injury.

 **DANGER**

Indicates an imminently hazardous situation that, if not avoided, will result in death or severe injury (extreme situations).

Before switching on the product, study operating instructions and make sure you follow the safety instructions it gives. You can recognise these by the 'Caution', 'Warning' and 'Danger' symbols.
Good practice tips and manufacturer's recommendations are in a grey box.

Safety instructions for maintenance

General precautions

For normal operation, the maintenance of 5 to 21 m³/h series pumps only require regular oil changes (*see Operating instructions*).

WARNING

Maintenance must be performed by a skilled maintenance operator trained in the relevant health and safety aspects (EMC, electrical hazards, chemical pollution, etc.).
Isolate the product from all energy sources (mains electricity, compressed air, etc.) before starting work.

DANGER



- Certain gases can become corrosive and toxic after decomposing when trapped in oil. Always wear protective gloves when handling used and dirty pump oil, drain it into a closable container, and do not breathe the oil fumes. Always use fully self-contained breathing apparatus.
- During pump removal, draining or maintenance operator could be in contact with process residues which could cause severe injury or death. Ask your safety department for instructions according to the local regulations.

We recommend:

- To purge the pumping installation with dry nitrogen.
- To wear gloves, protective glasses, breathing mask or any appropriated safety equipment.
- To ventilate the premises well.
- Not to eliminate maintenance waste via standard disposal channels. Have it destroyed by a qualified company if necessary.
- To install the inlet and exhaust blanking plates, these accessories are delivered with the pump.
- Decontamination – product dismantling
According to the regulations 2012/19/EU about Waste of electrical and electronical equipments, and 2011/65/EU about Restriction of Hazardous substances, the manufacturer provides a recycling paid service for the end of-life of electrical and electronic equipment.
Any obligation of the manufacturer to take back such equipment shall apply only to complete not amended or modified equipment, using Pfeiffer Vacuum original spare parts, delivered by Pfeiffer Vacuum, containing i.e. all its components and sub-assemblies.
This obligation will not cover the shipping cost to a Pfeiffer Vacuum taking back facility.
- Whenever you return the product to an repair service center, please make sure you follow the Service procedure and fill in the declaration of contamination found on our website.

WARNING

Insufficient tightness after servicing could result in chemical hazards. Always perform a leak test after maintenance.

Tools and consumable products

Special precautions

Read the safety instructions at the beginning of the maintenance chapter. Before disassembling the pump, drain it (see *Operating instructions*). All the seals and faulty parts should be replaced: provide a seal kit or an overhaul kit.

Spare parts

For fasted service, specify the following when ordering:

- Pump type.
- Serial number (on pump label).
- Part number (see list at end of operating instructions).

Overhaul kits containing the most frequently used parts are always available at our sales outlets. Be sure to use these kits so you will have all the parts necessary.

Seal kit

This kit contains all the seals on the pump which must be replaced at each complete disassembly.

| Pumps | 1005 | 1015 | 2005 | 2010 | 2015 | 2021 |
|----------|--------|--------|--------|------|------|------|
| I | – | 105515 | 103912 | | | |
| SD / SDI | 103911 | 105515 | 103911 | | | |
| C1 | 104975 | | | | | |
| C2 | – | 104975 | | | | |

Keep this kit in a dry place, away from heat and light (sunlight and ultraviolet light), in order to prevent any hardening of the elastomers (see AFNOR standards: "storage conditions for vulcanized elastomer based products" - FD T.46 022).

Overhaul kit

In addition to the seal kit, this kit contains a set of spare parts to perform overhaul on the pump for a two year period, under normal operating conditions.

| Pumps | 1005 | 1015 | 2005 | 2010 | 2015 | 2021 |
|------------|--------|--------|--------|--------|--------|--------|
| I | – | 104643 | 103906 | 103907 | 103908 | 103909 |
| SD / SDI * | 104622 | 104643 | 103902 | 103903 | 103904 | 103905 |
| C1 | 104617 | 104619 | 104976 | 104977 | 104978 | 104979 |
| C2 | – | – | – | 104614 | 104615 | 104616 |

* For SDI pump with no flanged stator, use a major kit P/N 108308.

The pumps are equipped with :

- a **shouldered not chromed ring (36)** for I, SD and SDI models with serial number < AM656245
- a **shouldered chromed ring (36)** for I, SD and SDI models with serial number ≥ AM656245
- a **shouldered chromed ring (36)** for C1 and C2 models.

The **shouldered not chromed ring** is a spare part that must be replaced with a chromed ring.

The **shouldered chromed ring** needn't systematically to be changed.

Spare parts (cont'd)

Vane kits for 2-stage pumps

This kit contains only vanes and springs in order to maintain several pumps of the same model (see table here after).

| Pumps | 2005 | 2010 | 2015 | 2021 |
|---------------------------|---------------|---------------|---------------|---------------|
| LP stage vane kit | 108417 | 108396 | 108397 | 108398 |
| Vane / Spring (quantity) | 20 / 22 | 20 / 42 | 20 / 62 | 20 / 62 |
| HP stage vane kit* | 108417 | 108399 | 108399 | 108399 |
| Vane / Spring (quantity) | 20 / 22 | 20 / 22 | 20 / 22 | 20 / 22 |

* except models C1 and C2.

| Pumps | 2005 | 2010 | 2015 | 2021 |
|----------------------------|--------------------------|------|------|------|
| Oil vane pump kit** | 108407 (10 vanes) | | | |

** except models SD and C2.

External shaft seal replacement kit (parts for shaft passage tightness on motor side)

This kit contains all the parts which must be replaced in the event of a leak on the shaft on the motor side.

| Pump models | P/N |
|------------------|---------------|
| All pumps | 065612 |

Screw kit

This kit contains all screws and washers for the range of Pascal's pump.

| Pump models | P/N |
|------------------|---------------|
| All pumps | 104919 |

Capacitor kit for single-phase motors


For safety reasons, the manufacturer recommends that single-phase motors be properly maintained. Although there is only an extremely small risk of flammability, you are advised to replace the capacitors and/or the motor in the following cases:

Single-phase motor with ID number < 110000 :

- **replace the motor immediately** by ordering a new motor.
- **then, every 5 years**, replace the capacitors and the relays by ordering a kit.

Single-phase motor with ID number > 110000 :

- **every 5 years**, replace the capacitors and the relays by ordering a capacitor kit.
- **after 15 years**, replace the motor by ordering a new motor.

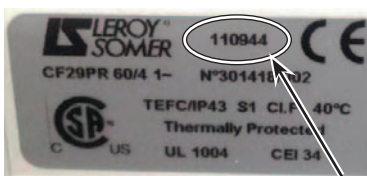

| Single-phase motor to maintain | | Capacitor/relay kit | | New equipped motor |
|--------------------------------|--------------------|---------------------|----------------------------------|--------------------|
| ID number < 110000 | ID number > 110000 | P/N | Description | Ordering P/N |
| 103749 | 110944 | 111695 | Capacitors (300µF, 20µF) + relay | 108694 |
| 103750 | 110913 | | | 108696 |
| 104734 | 110600 | | | 108697 |
| 105132 | 110946 | | | 108698 |
| 106442 | 110947 | | | 108699S |
| 107876 | 110948 | 111701 | Capacitors (300µF, 25µF) + relay | 108802S |




The procedure for replacing capacitors and relays is provided with the capacitor kit.

Tools and consumable products (cont'd)





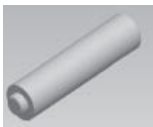



Specific tools

Tools kit This kit contains the usefull tools to disassemble and reassemble the shaft seals in the different flanges and flanged stators (see table below).

| Pump models | P/N |
|-------------|--------|
| All pumps | 112397 |

| | | HP and LP no flanged stator (<i>plan D</i>) | HP flanged stator (<i>plan C</i>) | LP flanged stator (<i>plan C</i>) |
|------------------------------|--|---|-------------------------------------|-------------------------------------|
| Lip seal assembly mandrel |  | A462651 | A462651 | A462651 |
| Protective sleeve |  | A463545 | A463545 | A463545 |
| Lip seal disassembly mandrel |  | - | - | A462649 |

Recommended tools

- Two 5.5 x 100 flat screwdrivers 
- Thin spanner: 10 mm on face 
- Male hexagonal wrench: 2.5 - 3 - 4 - 5 - 12 mm     
- 12 mm female hexagonal wrench 

Replacement of external shaft seal

In the event of an external oil leak on the pump, it is necessary to change the external shaft seal on the motor side (see page N – 4).

You will need:

- a front seal replacement kit (see page 5),
- a screwdriver,
- a 3, 4 and 5 mm Allen wrench,
- a lip seal mandrel (see page 6).

Stop the pump and disconnect the power cord motor.

Disconnect the pump from the installation to which it is connected.

If possible, position the pump vertically, with the motor at the top, resting on the front side of the oil case; in this position, it is not necessary to drain the oil case. Otherwise, disassemble the pump in the horizontal position, resting it on its base, after it has been drained (see **Operating instructions**).

Disconnect the motor by unscrewing the 4 fastening screws, simultaneously and alternately.

Remove the motor vertically.

Unscrew the fan fastening screw. Remove the fan, the key and the support washer.

With a screwdriver, remove the shouldered ring (36) and its O-ring (35).

Unscrew the two seal-holder fastening screws (37, 38) and remove the seal-holder (39).

Remove the seal (40) from the seal-holder as described on page 14 (picture 1) and discard it.

Clean the metal parts. Inspect the wearing side of the shaft sleeve: after cleaning, the sleeve may show a perfectly normal trace of rubbing (caused by polishing). Should the sleeve show any signs of indentation or grooves, it must be replaced.

Use new parts from the the external shaft seal replacement kit or from the overhaul kit.

Reassemble the lip seal (40) in its housing as described on page 14.



Reinsert the new O-ring (41a) on the seal-holder (39).

Insert the shaft sleeve inside the shouldered ring (36).

Engage the reassembled seal-holder on its axis and screw onto the frame.

Insert the O-ring (35) in the shaft sleeve. Position the support washer. Then, install the key, reassemble the fan and the motor in the reverse order of disassembly.

Immediately order an external shaft seal replacement kit or an overhaul kit (see page 5).

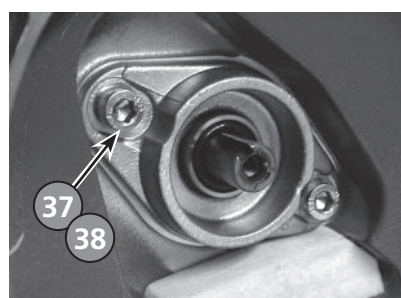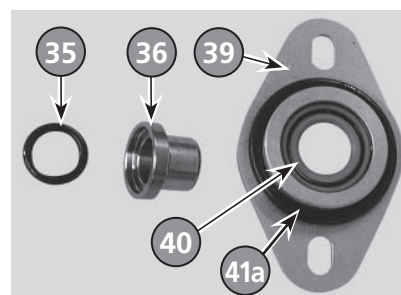

Disassembling the pump

Removing pump from system

Study the general precautions listed on Maintenance chapter page 3.

The following steps are necessary to protect the pump as far as possible from the effects of corrosion:

- Flush pump with a neutral gas (dry nitrogen) during half an hour to prevent toxic or corrosive gases accumulating in the pump.
- C2 Model: Disconnect the nitrogen lines to the pump.
- Disconnect the pump from the system and seal off the inlet and exhaust ports. Bring the pump to the maintenance area immediately.
- Drain pump (*see Operating instructions*).


DANGER

Do not store a pump in this condition for any length of time: once the neutral gas has dissipated, the inside of the oil case will be in contact with the ambient air laden with water vapor; this may react with the pumped gases to form acids that may corrode the pump even at room temperature.

The first phase of disassembly is to disassemble the motor, the second is to disassemble the pumping module.


Follow the chronological order of disassembling instructions. See the drawings and their part lists in pages N – 1 to N – 23.

Disassembling the motor block

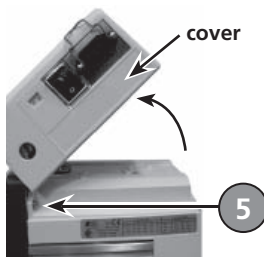

- 3 Remove the motor cover.
- 5 Remove the motor attachment screws (5) (*see page N – 18*).


If the motor is damaged, replace it (*see page N – 19*).

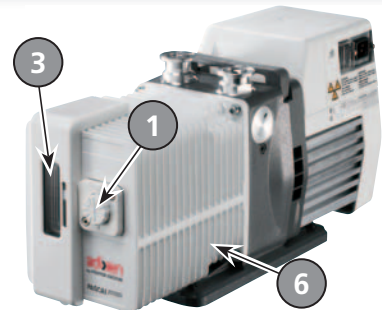

Disassembling the fan coupling

(*see page N – 2*)

- 4 Remove the fan (33) fastening screw (28) and the support washer (26). Remove the key.

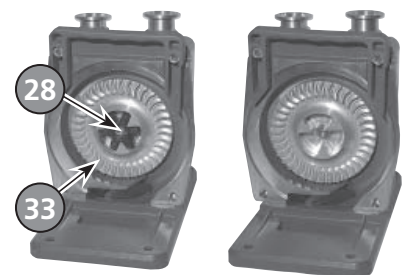

Replacing the front seal


See *page 7*.

Disassembling the gas ballast

except model pump C2 (*see page N – 2*)

- 25 Remove the gas ballast cover (58) (2 screws), the adjustment button (55), the spring (54) and the sleeve (53).


Remove the tank feed-through (49) (2 screws) and its seal (48).

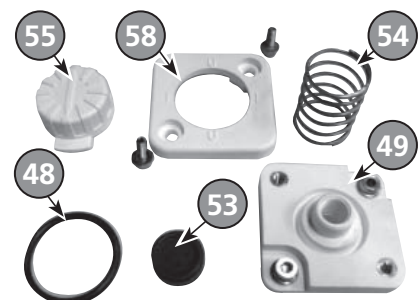

Disassembling the oil sight glass (see page N – 2)

3 Remove the sight glass cover (3).

Remove the plate (1), the ring (4a), the sight glass (4) and the O-ring (5).

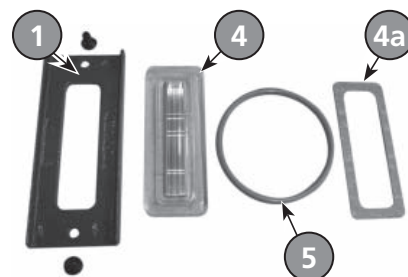


Removing the oil case (see page N – 2)

5 Remove the oil case (6) and its O-ring (11) after removing the 4 fastening screws (9).

Disassembling the bubbler (C2 pump) (see page N – 20)


10 Disconnect the nitrogen inlet. Remove the nitrogen inlet and disconnect the coupling (2) **without unscrewing** the connector (6).

Disconnect the nut (16) which secures the tube on the functional block and pull the bubble (8) to release it from the frame.

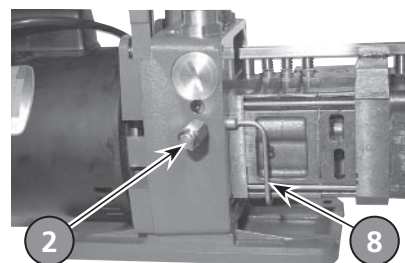


Disassembling the exhaust valve cover (see page N – 6)

5 Remove the screws (4) (13) (15) and the cover(s) (6) (17), the exhaust valves (2) (11) and their springs (3) (12).

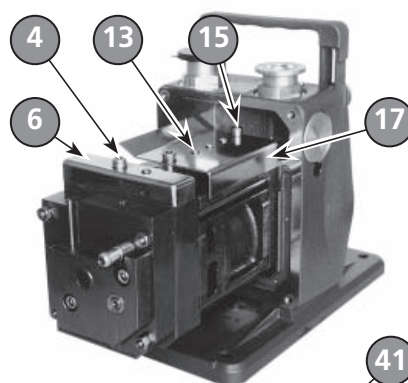


Disassembling the sniffer pipe (SDI model) (see page N – 10)

5 Remove the screw (41) and its washer.

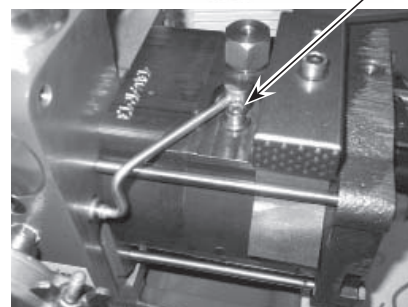

Insert a flat screwdriver near to the stator connector, and use it as lever arm to remove the sniffer pipe (38) from the stator. Then, pull on the other end of the pipe to remove it from the housing.

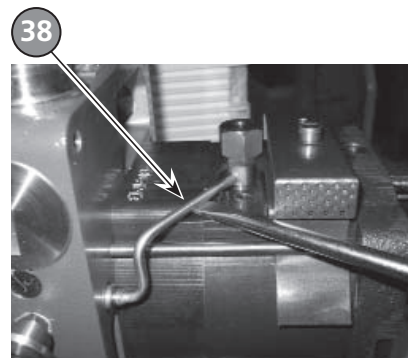

Disassembling the pump (cont'd)


Disassembling the SD/SDI pump oil system

(except 1015 SD)
(see page N – 16)

The oil system is set in the factory, it must be reset in the event of disassembly (see reassembly). However, the rear flange (4) can be disassembled without modifying the setting.

Remove the spinner-cam (6) by removing the circlip (7).

Do not disassemble the nozzle (8) to clean it. During the reassembly, check that it is not blocked by sending a jet of compressed air through it.

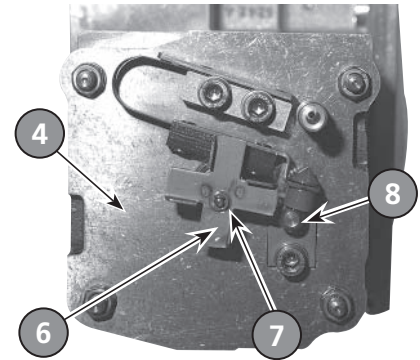

Disassembling the pump oil system I, C1, C2 pumps and 1015 SD



(see page N – 14)

5 Remove the cover from the oil pump (1). Release the cylinder (13) equipped with the washer (14), piston (11) and spring (12).

Release the stop valve (10) from its housing.

12 In the rear flange, unscrew the seat of the stop valve (9) and remove the O-ring (8).

Then remove the vane (4), the oil pump rotor (3) and the Oldham coupling (5).

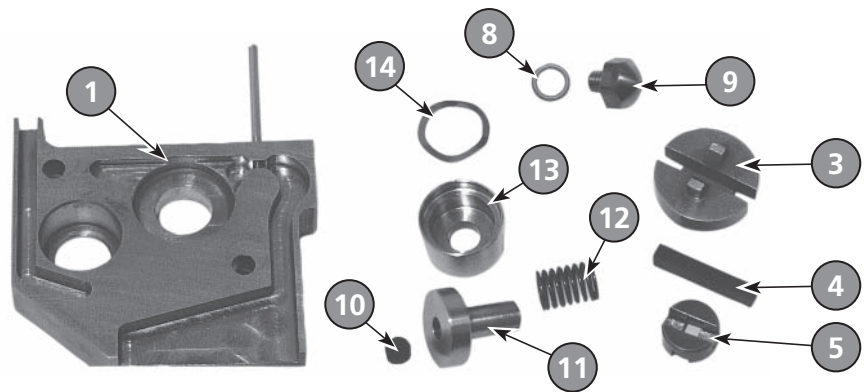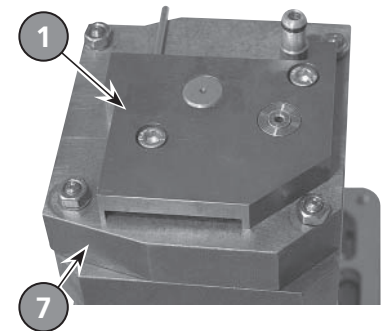


Disassembling the rear flange

(see pages N – 14 et N – 16)


10 Remove the 4 nuts. Release the flange (7) in the axis.

Disassembling the pumping module with flanged stator

(see N – 10)

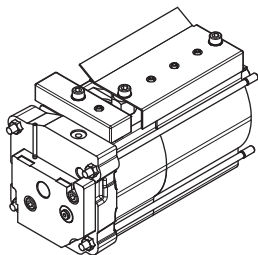


2 stages models: steps 1 to 4

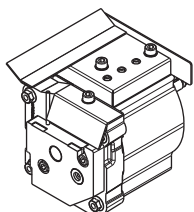


1 stage models: steps 3 to 4


- 1 Insert two screwdrivers in the notches and release the set HP stator (34) and HP rotor (31) in the axis.

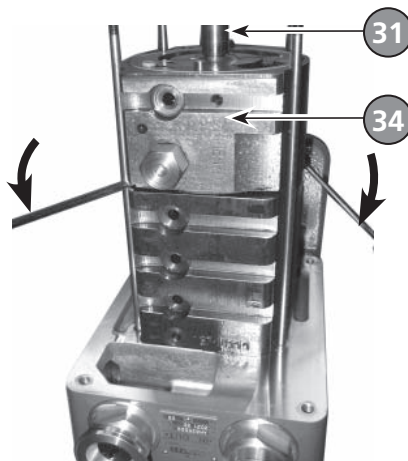


- 2 Release the HP rotor (31) from the HP stator (34) and the vanes.

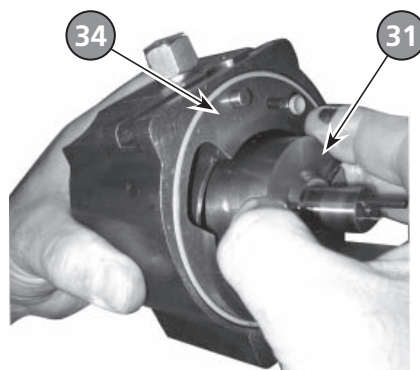

- 3 Insert two screwdrivers in the notches and release the set BP stator (26) and BP rotor (23) in the axis.

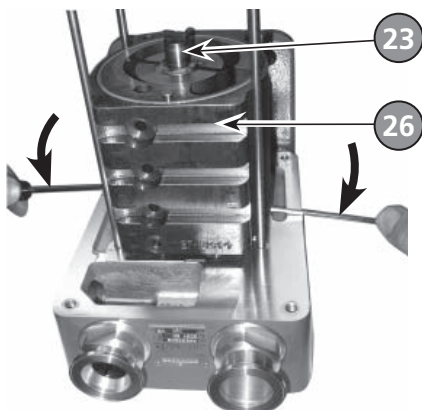


- 4 Release the BP rotor (23) from the BP stator (26) and the vanes.

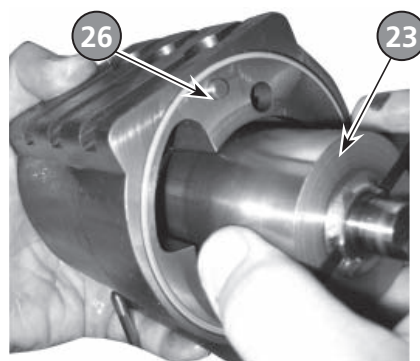


Disassembling the pump (cont'd)


Disassembling the pumping module with no flanged stator (see N - 6)

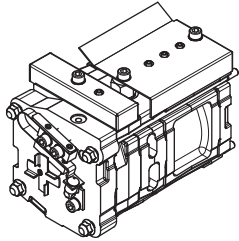


1 Remove the HP stator (34) by sliding it along the HP rotor (31). Remove the HP rotor and the vanes.

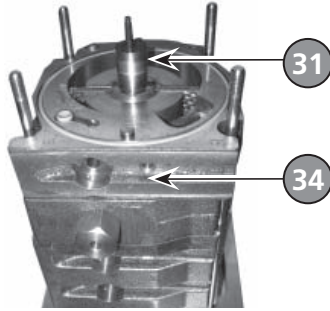


2 Insert two screwdrivers in the notches and release the central plate (29) in the axis.

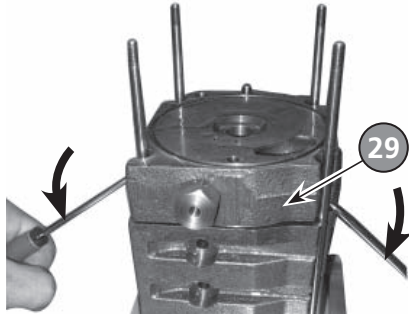

3 Insert two screwdrivers in the notches and release the BP stator (26) by sliding it along the BP rotor (23). Remove the BP rotor and the vanes.

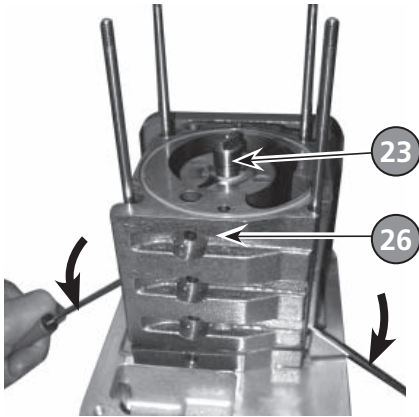

4 Release the front plate (19).

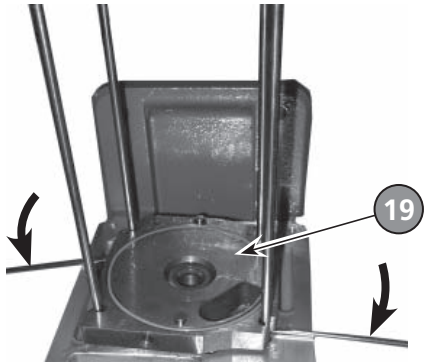

Note : If one of the pumping module part with no flanged stator is damaged and must be replaced, it is necessary to replace it by new parts from a flanged stator configuration (refer to N - 21, N - 23 for spare part list).

Cleaning components

Cleaning metal components

Solvents are required to clean components.

Standard precautions should be taken in compliance with the manufacturer's instructions.

After use in mineral or synthetic oil, clean the metal components with a mineral products based solvent such as **AXAREL**⁽¹⁾, **CARECLEAN**⁽²⁾, **PREMACLEAN**⁽³⁾, **NAPHTESOL**⁽⁴⁾. Proceed as follows:

- Clean when cold or hot (max. 45°C) by dipping or using a cloth
- Vacuum dry in a ventilated oven
- **The component must be cleaned a second time with alcohol.**

After use in (perfluorinate) synthetic oil, clean the metal components in a solvent such as **GALDEN S 90**^{TM(5)} and proceed as follows:

- Clean when cold by dipping or using a cloth
- Dry the components in the air or with compressed air

After use in (non-perfluorinate) synthetic or mineral oil, clean the metal components with a solvent such as alcohol and proceed as follows:

- Clean when cold by dipping or using a cloth
- Dry the components in the air
- Industrial washing solutions can also be used. The cleaning operation should be followed by vacuum drying.

Cleaning the oil level sight glass

I, SD, SDI, C2 series pumps

When cleaning this plastic sight glass, avoid contact with alcohol or alcohol-based washing solutions. Clean the component with a solvent, but do not steep it, and rinse it immediately.

C1 series pumps

The sight glass of these pumps is made of glass: it can be cleaned with common used solvents.

(1) DUPONT DE NEMOURS registered trademark

(2) CASTROL registered trademark

(3) DOW registered trademark

(4) Nippon Oil Corporation registered trademark

(5) MONTEDISON registered trademark



Replacement of shaft seals

- Specific tools**
- Specific extraction tool.
 - Specific assembly mandrel.
 - A support plate (or washer).

- Recommended tools**
- A flat screwdriver 
 - A hammer.

Extracting a shaft seal from its housing

- Flange (**picture 1**): the seal is extracted using a screwdriver, resting on the plate (or washer) so as not to damage the seal housing, or
- Flanged stator (**picture 2**): the seal is extracted with the specific extraction tool.

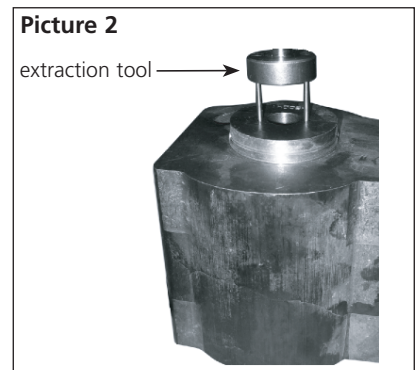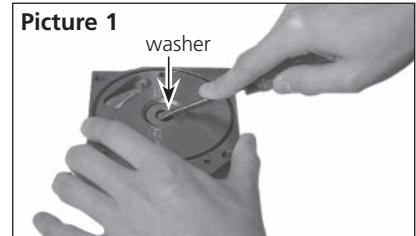


Assembling the shaft seal

The seal housing and the seal lip are lubricated with the lubricant used in the pump. The flange is resting on a flat surface.

According to the direction of assembly, the seal is fitted on the assembly mandrel.



Using a press or a hammer, the seal is inserted in its housing.

Check the position of the seal: it must lean against its bearing.

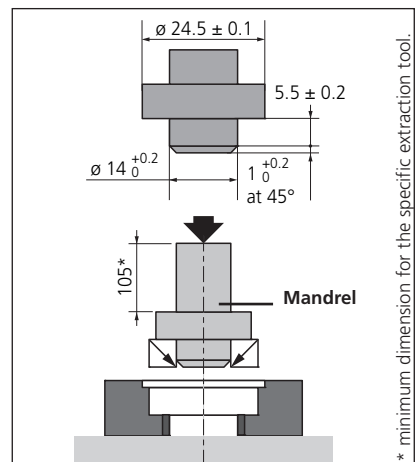

Direction of assembly of shaft seals

They are fitted using the assembly mandrel according to the direction of assembly below:

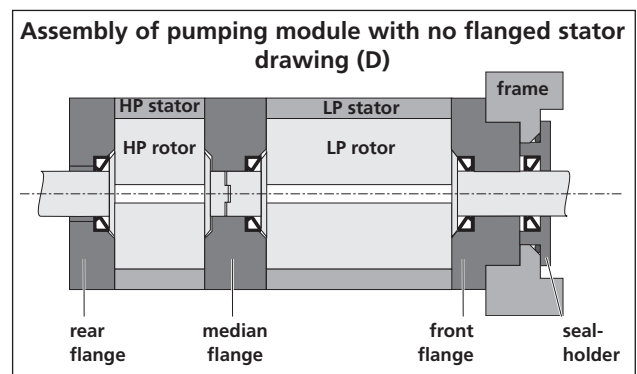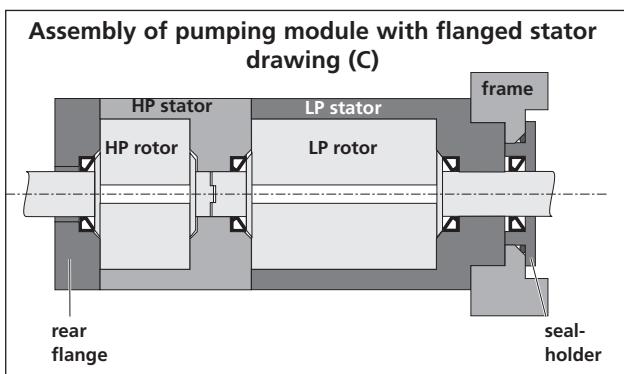


Reassembling the pump

Component preparation


- All surfaces in contact are coated with oil (rotors, vanes...).
- Check that the lubrication holes are not blocked.
- Observe the **nominal clamping torques for the reassembly of the functional block** (see chapter "Nomenclature").
- Rest the frame (42) on a flat surface in order to raise the pump.

Reassembling the pumping module with flanged stator (see page N – 10)

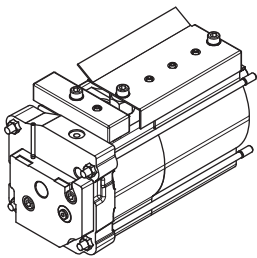


2 stages models: steps 1 to à 6


- 1** Place the BP stator (26) on the frame (42).
If there is no centering pin, align the top of the stator with the exhaust notch in the housing.

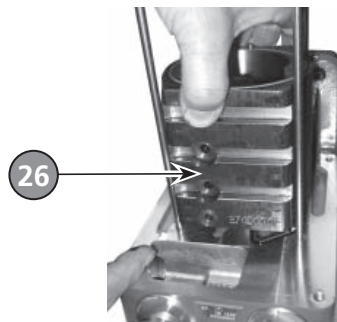



- 2** For not damage the shaft seal, use protective sleeve on the rotor axis (or wrap end of shaft with adhesive tape) and oil it.

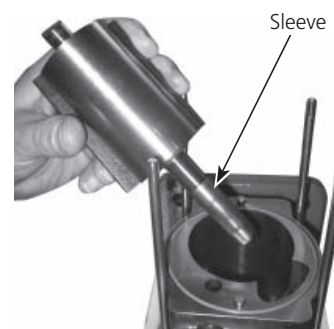

- 3** Slide the BP rotor (23) equipped with its vanes and springs (rounded edges facing outwards) in the BP stator (26). Remove the protective sleeve

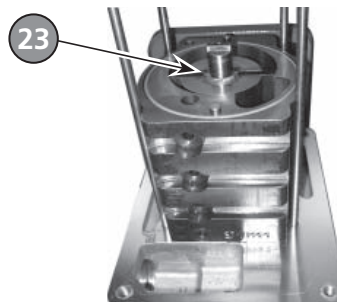


- 4** Place the HP stator (34) on the BP stator (26).

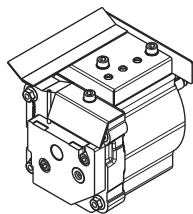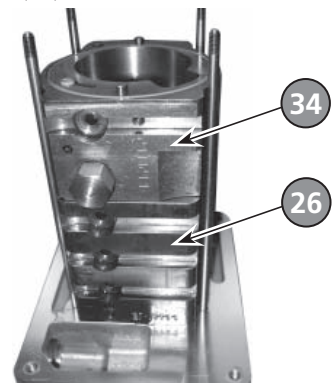


1 stage models: steps 1, 2, 3 and 6

- 5** Slide the HP rotor (31) equipped with its vanes and springs (rounded edges facing outwards) in the HP stator (34).

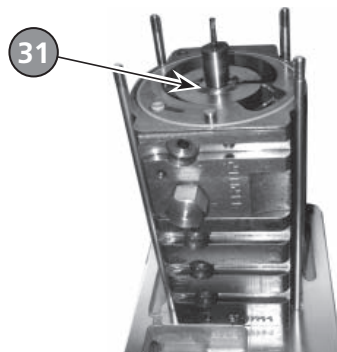


- 6** Place the rear flange (7) on the HP stator (34).

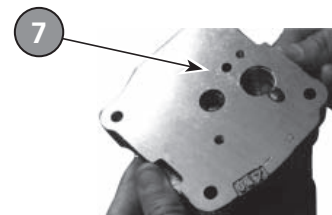


Reassembling the pump (cont'd)


Reassembling the pumping module with no flanged stator (see page N – 6)

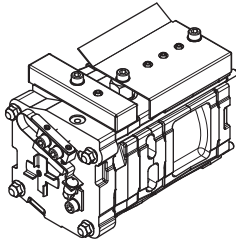


- 1** Fit the front plate (19) on the frame (42).

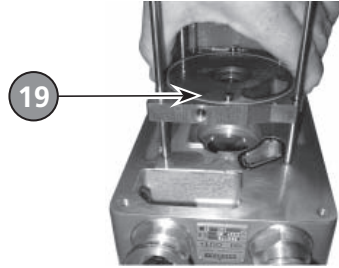


- 2** For not damage the shaft seal, use protective sleeve on the rotor axis (or wrap end of shaft with adhesive tape) and oil it.

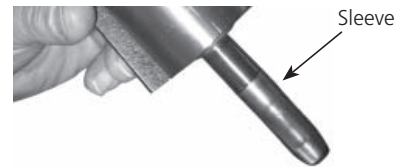


- 3** Place the BP Rotor (23) equipped with its vanes and springs (rounded edges facing outwards) on the front plate (19). Remove the protective sleeve.

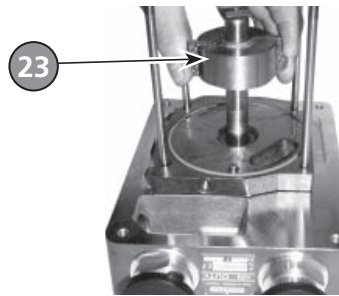


- 4** Slide the BP stator (26) on the BP rotor (23).

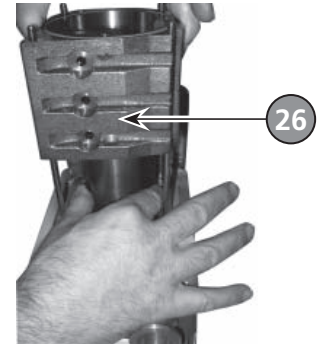


- 5** Place the central plate (29) on the BP stator (26).

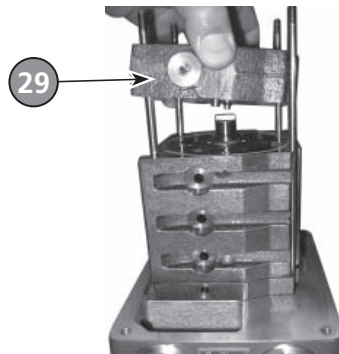


- 6** Place the HP rotor (31) equipped with its vanes and springs (rounded edges facing outwards) on the central plate (29).

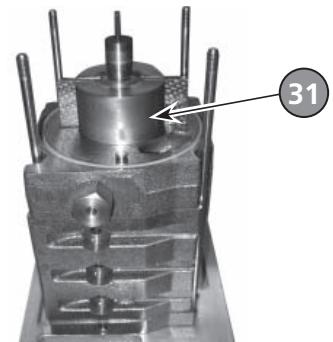

- 7** Slide the HP stator (34) on the HP rotor (31).

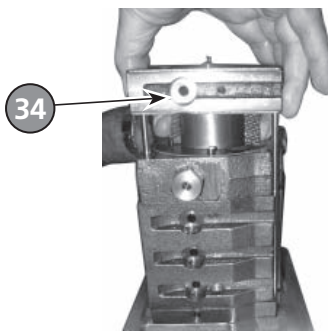

- 8** Place the rear plate (7) on the HP stator (31).

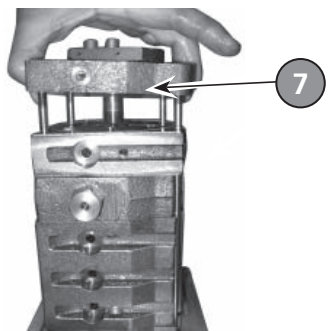

Reassembling the oil system

Spinner-cam, SD and SDI pumps
(except 1015 SD)
(see page N – 16)

Spinner-cam settings


Check that the nozzle is not blocked by sending a jet of compressed air through it.

Place the spinner-cam system on the rear plate (4) and fix it with the clips (7).

Offset the spinner-cam (a) by pressing on the blades.

Turn the shaft up to the maximum displacement of the lever (b).

The distance between the seat (c) and the stop valve (d) must be 0.9 to 1.2mm (0.035 to 0.047 inch): it is set by adjusting the orientation of the lever.

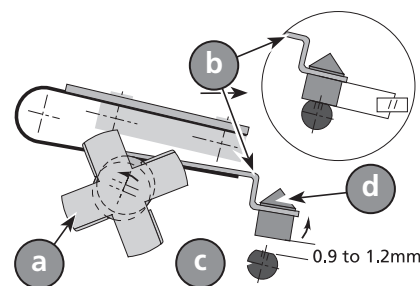

The stop valve face must be perpendicular to the axis of the oil inlet hole; when free, the stop valve should rest on its seat: check the parallelism of the lever in relation to the bearing face of the stop valve seat. Orient the seat to obtain the correct setting.

Oil pump, I, C1 and C2 pumps
(and 1015 SD)
(see page N – 14)

Oil pump settings

In the rear plate (7), place the Oldham coupling (5), the vane (4) and the rotor (3).

Screw the seat (9) equipped with its O-ring (8). Place the piston (11) with its antiskid-back device (10), the spring (12), the cylinder (13) and the washer (14).

Position the rotor of the oil pump so that the slot is horizontal (or parallel with the pump base). To turn it, use the fan.

Reassembling the exhaust valve cover

(see page N – 6)

Pump in a horizontal position, pour a small quantity of oil beforehand around the exhaust valve holes.

Place the valves (2) or (11) equipped with the springs (3) or (12)

Place the valve covers (6) or (17) and fix them with screws and washers.

Reassembling the bubble device

C2 pump (see page N – 20)

Insert the bubbler (8) equipped with its o-ring in the frame.

Position the tube fastener (9) on the pin and tighten the nut on the rear plate (7).

Insert the ball (4), the spring (5) in the coupling (2) and tighten it on the connector (6).

Reassembling the oil casing

(see page N – 6)

Fit the oil casing (6) equipped with its o-ring (11) on the frame (42).

Tighten it with screw (9) and washers (10) (after making sure that the seal is positioned in its seal groove).

Reassembling the oil level sight glass

(see page N – 2)

Place the o-ring (5) in its groove and fit the sight glass (4), the flat ring (4a) (according to the model), the oil sight glass cover (3) and tighten with screws (2). Comply with the recommended tightening torque.

CAUTION

C1 series pump: The sight glass is made of glass: gradually tighten the two attachment screws in alternation to avoid placing the sight glass under stress.

Reassembling the gas ballast

(see page N – 2)

Position the oil case feed-through (49) equipped with its o-ring (48) in its housing by centering it on the gas ballast tube (46). Assemble using the screws (52).

Equip the adjustment knob (55) with the sleeve (53) and the spring (54). Position the assembly in the cover (58) and secure on the oil case feed-through (49) with screws (57).

Reassembling the pump (cont'd)

Reassembling the seal-holder (see page N – 2)

(See page 7).

Reassembling the fan and the motor side components (see page N – 2)

Fit the shaft key (22) (N – 10) on HP rotor.
Fit the coupling fan (33) and secure it with the screw (28) and washer (26).
Fit the drive key on the motor shaft. Install the motor coupling (3) (N – 18) down to the stop on the motor shaft and secure it with the screw (2) (N – 18).
Install the plastic coupling (4) (N – 18) on the motor coupling (3) (N – 18).
Fit the motor on the frame and secure with the 4 mounting bolts (5) (N – 18).

Fill with oil

After reassembling, fill the pump with oil before start-up the pump (see *Operating instructions*).

Reassembling of the pumping pipe (model SDI)

Position one the end of the pipe (38) into the housing hole designed for this purpose and the other end on the stator (34).
Do not forget to install o-rings (39) and (40) after having checked their status (no cuts).

Service

Pfeiffer Vacuum offers first-class customer service!

- On-Site maintenance for many products
- Overhaul / repair in the nearby Service Location
- Fast replacement with refurbished exchange products in mint condition
- Advice on the most cost-efficient and quickest solution

Detailed information, addresses and forms at: www.pfeiffer-vacuum.com (Service).

Overhaul and repair in the Pfeiffer Vacuum Service Center

The following general recommendations will ensure a fast, smooth servicing process:
→ Fill out the «Service Request/Product return» form and send it to your local Pfeiffer Vacuum Service contact.

- Include the confirmation on the service request from Pfeiffer Vacuum with your shipment.
- Fill out the declaration of contamination and include it in the shipment (mandatory!). The Declaration of contamination is valid for any product/device including a part exposed to vacuum.
- Dismantle all accessories and keep them.
- Close all the ports flange openings by using the original protective covers or metallic airtight blank flanges for contaminated devices.

If possible, send pump or unit in its original packaging.

Sending of contaminated pumps or devices

No devices will be accepted if they are contaminated with micro-biological, explosive or radioactive substances. "Hazardous substances" are substances and compounds in accordance with the hazardous goods regulations (current version).

- Neutralize the pump by flushing it with nitrogen or dry air.
- Close all openings airtight.
- Seal the pump or device in suitable protective film.
- Return the pump/device only in a suitable and sturdy transport container and send it in while following applicable transport conditions.

Pump or device returned without declaration of contamination form fully completed and/or non-secured in a suitable packaging, will be decontaminated and/or returned at the shipper's expense.

Exchange or repaired devices

The factory operating parameters are always preset with exchange or repaired devices. If you use specific parameters for your application, you have to set these again.


Service orders

All service orders are carried out exclusively according to our general terms and conditions for the repair and maintenance, available in our website.

Composants de maintenance / Maintenance components / Ersatzteilliste

| | | | |
|--|---|--|---------|
| Plan de montage cuve et bâti | Oil casing and central housing assembly drawing | Gesamtplan Ölbehälter und Pumpenträger..... | 2 / 4 |
| Nomenclature cuve et bâti..... | Oil casing and central housing part list | Nomenklatur Ölbehälter und Pumpenträger..... | 3 / 5 |
| Plan du bloc fonctionnel (avec stator non flasqué) (D)..... | Pumping module drawing (with no flanged stator) (D) | Gesamtplan: Funktionsblock mit Stator und Flanschen (D)..... | 6 / 8 |
| Nomenclature du bloc fonctionnel..... (avec stator non flasqué) (D) | Pumping module part list (with no flanged stator) (D) | Nomenklatur: Funktionsblock mit Stator und Flanschen (D)..... | 7 / 9 |
| Plan du bloc fonctionnel (avec stator flasqué) (C)..... | Pumping module drawing (with flanged stator) (C) | Gesamtplan: Funktionsblock mit Stator-Monoblock (C) | 10 / 12 |
| Nomenclature du bloc fonctionnel..... (avec stator flasqué) (C) | Pumping module part list (with flanged stator) (C)..... | Nomenklatur: Funktionsblock mit Stator-Monoblock (C)..... | 11 / 13 |
| Plan du système de lubrification pompe à huile (A)..... | Oil pump system drawing (A) | Gesamtplan (A) Ölpumpensystem | 14 |
| Nomenclature du système de lubrification | Oil pump system part list (A)..... | Nomenklatur (A) Ölpumpensystem..... | 15 |
| | pompe à huile (A) | | |
| Plan du système de lubrification levier moulinet (B)..... | Oil system drawing (B)..... | Gesamtplan (B) Flügelrad-Ölsystem | 16 |
| Nomenclature du système de lubrification | Oil system part list (B)..... | Nomenklatur (B) Flügelrad-Ölsystem..... | 17 |
| | levier moulinet (B) | | |
| Plan ensemble motorisation (M)..... | Motor assembly drawing (M)..... | Gesamtplan (M) Motor..... | 18 |
| Nomenclature ensemble motorisation (M)..... | Motor assembly part list (M) | Nomenklatur (M) Motor | 19 |
| Plan du système bulleur | Bubbler system drawing | Gesamtplan Bubbler system | 20 |
| Nomenclature du système bulleur..... | Bubbler system part list..... | Nomenklatur Bubbler system..... | 20 |
| Remplacement des pièces du bloc fonctionnel non flasqué..... | Pumping module (with no flanged stator) spare parts..... | Pumpenblock (mit Stator und Flanschen) Unterhaltung Teile..... | 21 |

Plan de montage cuve et bâti
Oil casing and central housing assembly drawing
Ölbehälter und Pumpenträger Gesamtplan

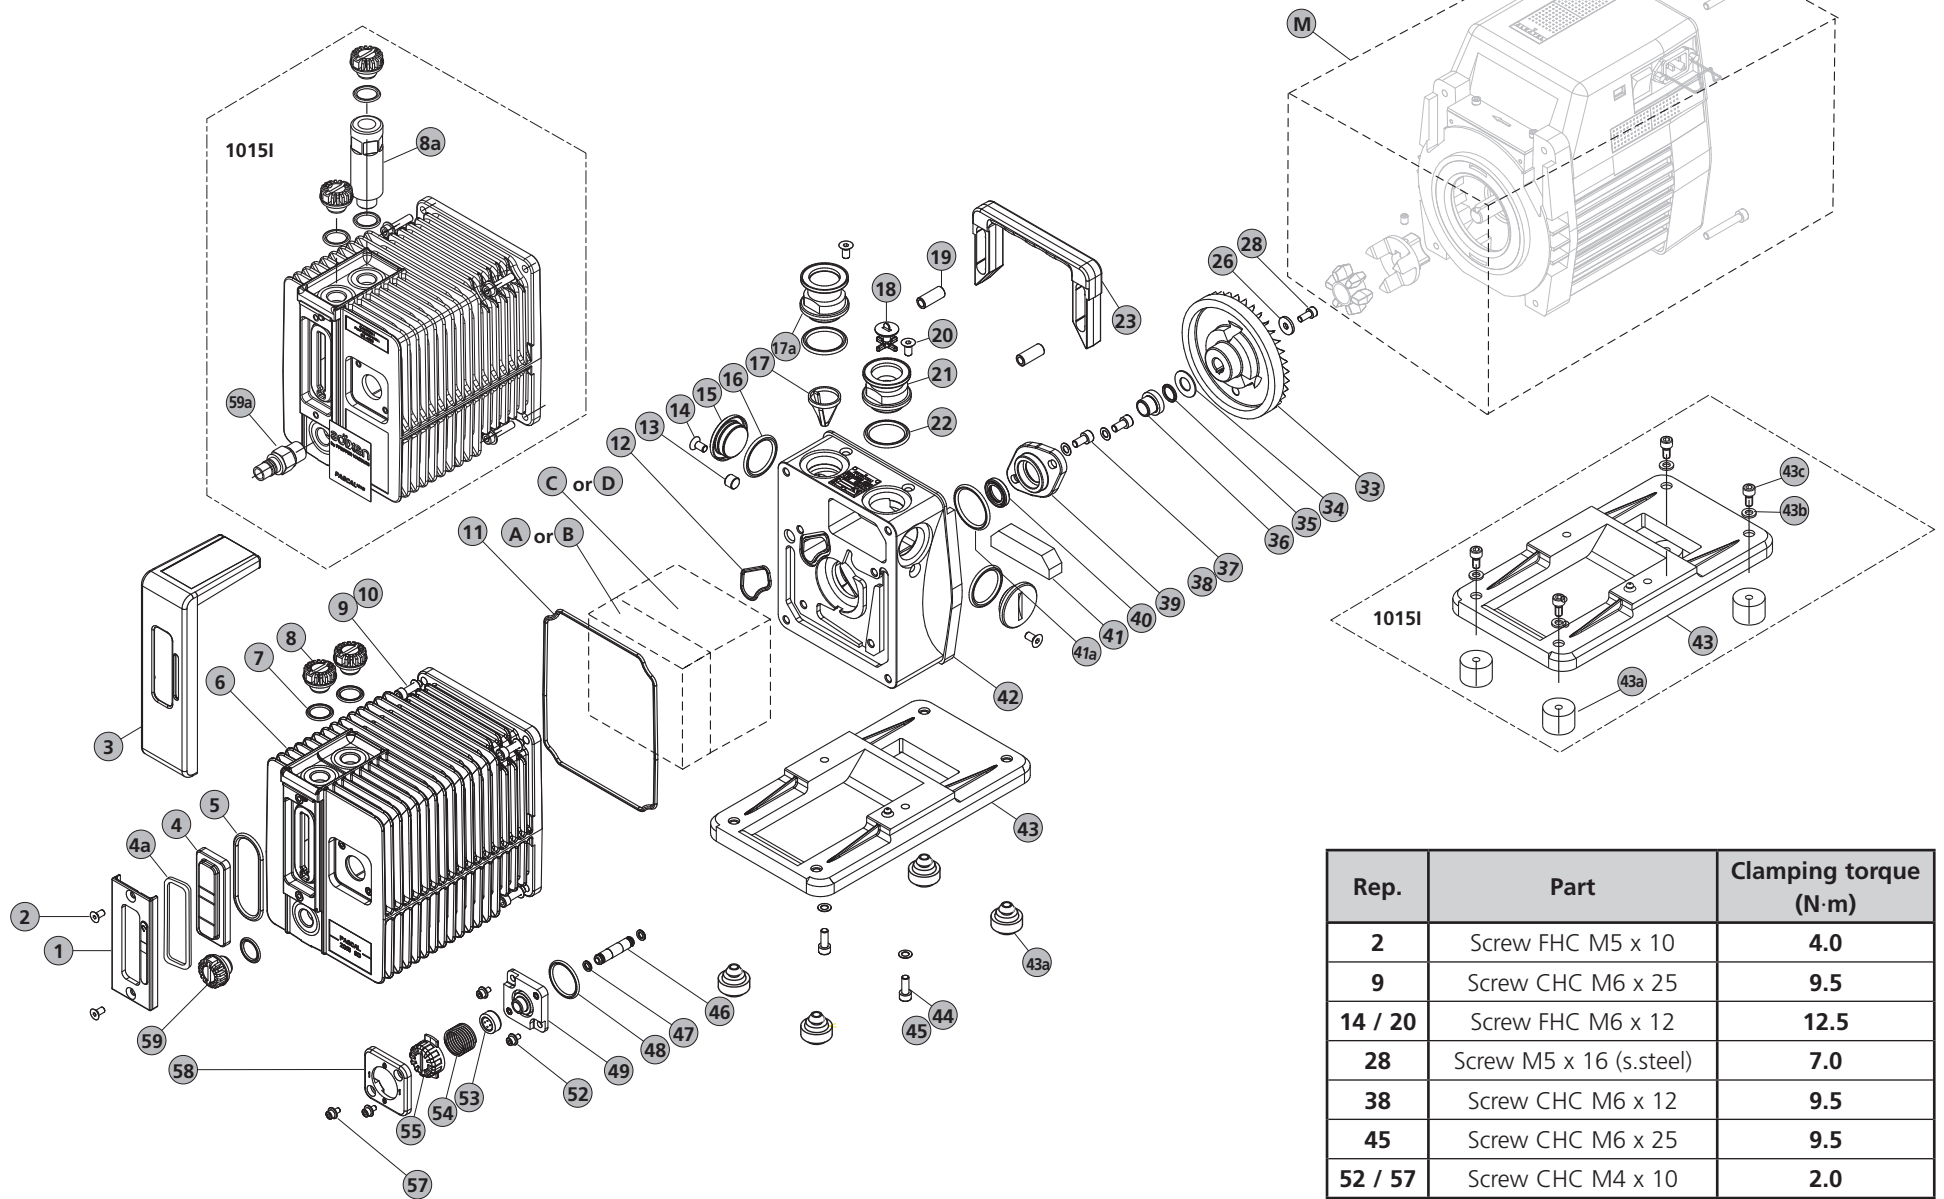

| Rep. | Part | Clamping torque (N·m) |
|---------|-------------------------|-----------------------|
| 2 | Screw FHC M5 x 10 | 4.0 |
| 9 | Screw CHC M6 x 25 | 9.5 |
| 14 / 20 | Screw FHC M6 x 12 | 12.5 |
| 28 | Screw M5 x 16 (s.steel) | 7.0 |
| 38 | Screw CHC M6 x 12 | 9.5 |
| 45 | Screw CHC M6 x 25 | 9.5 |
| 52 / 57 | Screw CHC M4 x 10 | 2.0 |


Nomenclature cuve et bâti / Oil casing and central housing part list / Ölbehälter und Pumpenträger Nomenklatur

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | | | | | | | | | | | | | | | REF. P/N Bestell. Nr | | | | |
|-----|--|----------------------------------|------------------------------------|-------------|--------|--------|--------|--------|---------|----------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----------------------------|---------|---------|-----|---------|
| | | | | 2005 I | 2010 I | 2015 I | 2021 I | 1015 I | 2005 SD | 2005 SDI | 2010 SD | 2015 SD | 2021 SD | 1005 SD | 1015 SD | 2010 C2 | 2015 C2 | 2021 C2 | 2005 C1 | 2010 C1 | | 2015 C1 | 2021 C1 | | |
| 1 | Plaque de niveau | Level plate | Ölmesstab | 1 | 1 | 1 | 1 | 1 | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1066105 |
| 1 | Plaque de niveau | Level plate | Ölmesstab | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | | 1066095 |
| 2 | Vis FHC M5 x 10 | Screw FHC M5 x 10 | Schraube FHC M5 x 10 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | + |
| 3 | Cache de niveau (gris) | Oil sight glass cover (grey) | Ölschauglassdeckel (grau) | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 102849 |
| 3 | Cache de niveau (blanc) | Oil sight glass cover (white) | Ölschauglassdeckel (weiss) | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | | 102848 |
| 4 | Voyant | Oil level sight glass | Ölschauglas | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ■ |
| 4a | Joint de niveau | Flat ring | Flachdichtung | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 5 | Joint torique c 3,53 - d 63,1 | O-ring c 3.53-d 63.1 | Dichtung c 1,9 - d 7,2 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 6 | Cuve équipée | Oil casing | Ölbehälter | 1 | | | | | 1 | 1 | | | | 1 | | | | | | | | | | | 119509 |
| 6 | Cuve équipée | Oil casing | Ölbehälter | | 1 | | | 1 | | | 1 | | | | 1 | | | | | | | | | | 119508 |
| 6 | Cuve équipée | Oil casing | Ölbehälter | | | | 1 | | | | | 1 | | | | | | | | | | | | | 119507 |
| 6 | Cuve équipée | Oil casing | Ölbehälter | | | | 1 | | | | | 1 | | | | | | | | | | | | | 119506 |
| 6 | Cuve équipée | Oil casing | Ölbehälter | | | | | | | | | | | | | | 1 | | | | | 1 | | | 119512 |
| 6 | Cuve équipée | Oil casing | Ölbehälter | | | | | | | | | | | | | 1 | | | | | | | 1 | | 119511 |
| 6 | Cuve équipée | Oil casing | Ölbehälter | | | | | | | | | | | | | | | | 1 | | | | 1 | | 119510 |
| 6 | Cuve équipée | Oil casing | Ölbehälter | | | | | | | | | | | | | | | | | 1 | | | | 1 | 119513 |
| 7 | Joint torique c 2,7 - d 16,9 - Bague R13 | O-ring c 2.7 - d 16.9 - Ring R13 | Dichtung c 2,7 - d 16,9 - Ring R13 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | ● |
| 8 | Bouchon G 3/8 | Plug G 3/8 | Blindstopfen G 3/8 | 2/3 | 2/3 | 2/3 | 2/3 | 2/2 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | | | | | | | | | ■ |
| 8 | Bouchon G 3/8 | Plug G 3/8 | Blindstopfen G 3/8 | | | | | | | | | | | | | | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 052752 |
| 8a | Rallonge | Extension lead | Verlängerung | | | | | 1 | | | | | | | | | | | | | | | | | A459031 |
| 9 | Vis CHC M6 x 25 | Screw CHC M6 x 25 | Schraube CHC M6 x 25 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | 4/6 | + |
| 10 | Rondelle | Washer | Unterlegscheibe | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | 4/8 | + |
| 11 | Joint torique c 3-d 165 | O-ring c 3 - d 165 | Dichtung c 3 - d 165 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 12 | Joint torique c 2,5-d 33,5 | O-ring c 2.5 - d 33.5 | Dichtung c 2,5 - d 33,5 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 13 | Bouchon G 1/8 | Plug G 1/8 | Blindstopfen G 1/8 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | | | | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | ■ |
| 14 | Vis FHC M6 x 12 | Screw FHC M6 x 12 | Schraube FHC M6 x 12 | 2/4 | 2/4 | 2/4 | 2/4 | 2/3 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | + |
| 15 | Obtuteur M 30x1 | Stopper M 30 x 1 | Deckel M 30 x 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | | | | | | | | | 065821 |
| 15 | Obtuteur M 30x1 | Stopper M 30 x 1 | Deckel M 30 x 1 | | | | | | | | | | | | | | | | | | | | | | 065816 |
| 16 | Joint torique c 3,6-d 29,3 | O-ring c 3.6-d 29.3 | Dichtung c 3,6 - d 29,3 | 2/4 | 2/4 | 2/4 | 2/4 | 2/3 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | ● |
| 17 | Filtre d'aspiration | Inlet filter | Ansaugfilter | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | 065787 |
| 17 | Filtre d'aspiration | Inlet filter | Ansaugfilter | | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103395 |
| 17a | Embout d'aspiration | Inlet nipple | Ansaugstutzen | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | 065819 |
| 17a | Embout d'aspiration | Inlet nipple | Ansaugstutzen | | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 065814 |
| 17a | Embout d'aspiration | Inlet nipple | Ansaugstutzen | | | | | 1 | | | | | | | | | | | | | | | | | A466199 |
| 18 | Soupape de refoulement | Exhaust valve | Auspuffventil | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | ● |
| 19 | Entretoise poignée | Handle brace | Griffsteg | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 102930 |
| 20 | Idem 14 | Idem 14 | Ebenso 14 | 2/4 | 2/4 | 2/4 | 2/4 | 1/3 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | + |
| 21 | Embout refoulement DN 25 | Exhaust nipple DN 25 | Auspuffstutzen DN 25 | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | 065820 |
| 21 | Embout refoulement DN 25 | Exhaust nipple DN 25 | Auspuffstutzen DN 25 | | | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 065815 |
| 22 | Idem 16 | Idem 16 | Ebenso 16 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | ● |
| 23 | Poignée | Handle | Griff | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103342 |
| 26 | Rondelle | Washer | Unterlegscheibe | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 065107 |
| 28 | Vis à collerette M5 x 16 | Screw M5 x 16 | Schraube M5 x 16 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | + |
| 33 | Manchon ventilateur | Fan coupling | Ventilator Kupplungshälfte | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103386 |

● Lot joints / Seal kit / Dichtungssatz
■ Kit de révision / Overhaul kit / Revision kit
+ Lot visserie / Screw kit / Schraubensatz
○ Lot palettes / Vane kit / Schiebersatz
* Kit joint avant / Front seal kit / Vorderer Dichtungssatz

Nomenclature

Plan de montage cuve et bâti
Oil casing and central housing assembly drawing
Ölbehälter und Pumpenträger Gesamtplan

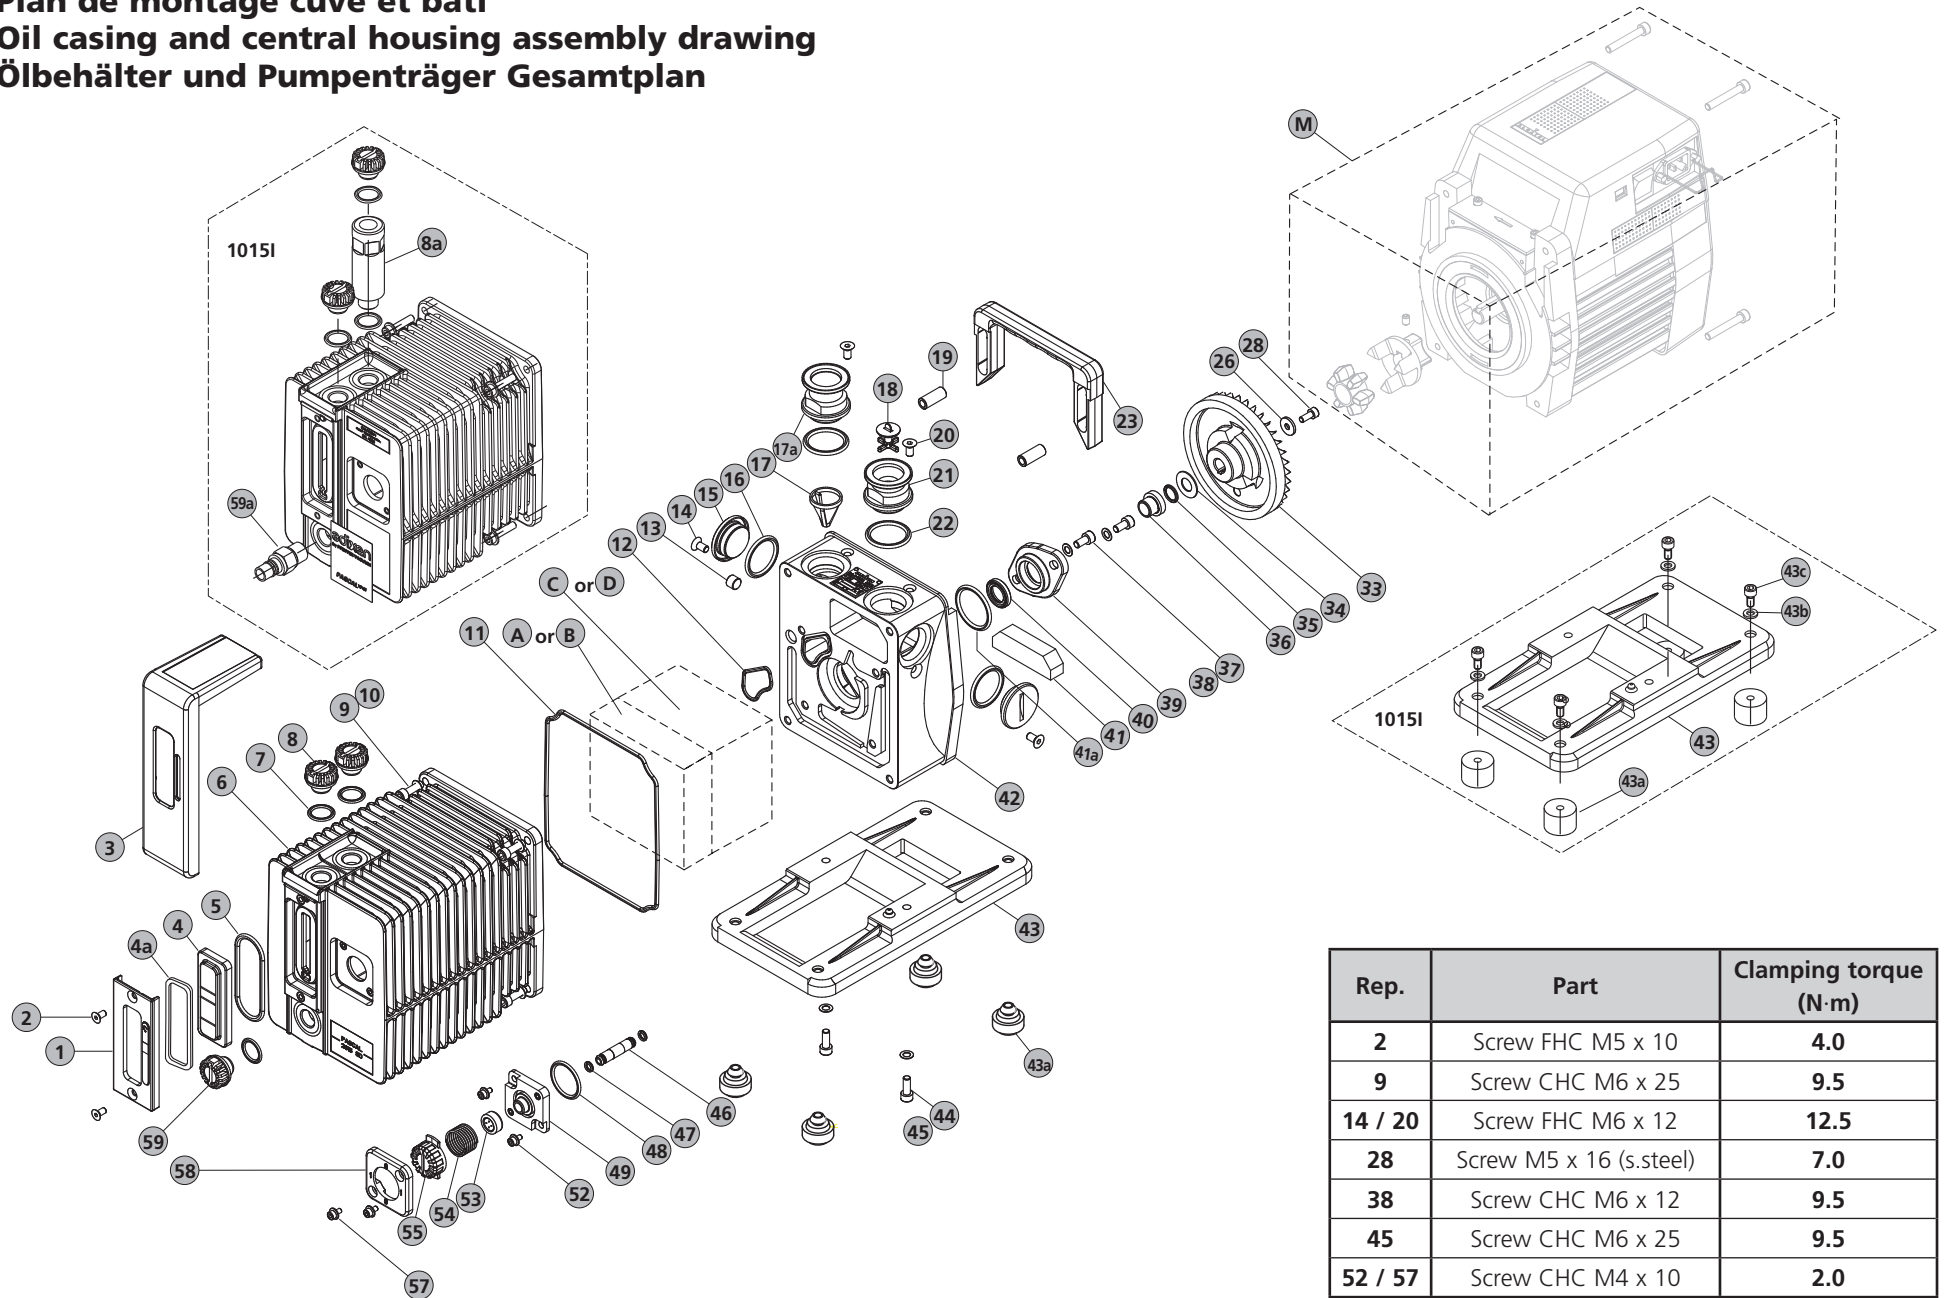

| Rep. | Part | Clamping torque (N·m) |
|---------|-------------------------|-----------------------|
| 2 | Screw FHC M5 x 10 | 4.0 |
| 9 | Screw CHC M6 x 25 | 9.5 |
| 14 / 20 | Screw FHC M6 x 12 | 12.5 |
| 28 | Screw M5 x 16 (s.steel) | 7.0 |
| 38 | Screw CHC M6 x 12 | 9.5 |
| 45 | Screw CHC M6 x 25 | 9.5 |
| 52 / 57 | Screw CHC M4 x 10 | 2.0 |

Nomenclature cuve et bâti / Oil casing and central housing part list / Ölbehälter und Pumpenträger Nomenklatur

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | | | | | | | | | | | | | | REF. P/N Bestell. Nr | | | |
|-----|--|----------------------------------|--------------------------------------|-------------|--------|--------|--------|--------|---------|----------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----------------------------|---------|---------|---------|
| | | | | 2005 I | 2010 I | 2015 I | 2021 I | 1015 I | 2005 SD | 2005 SDI | 2010 SD | 2015 SD | 2021 SD | 1005 SD | 1015 SD | 2010 C2 | 2015 C2 | 2021 C2 | 2005 C1 | | 2010 C1 | 2015 C1 | 2021 C1 |
| 34 | Rondelle d'appui | Washer | Unterlegscheibe | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 065847 |
| 35 | Joint torique c 2,7 - d 12,1 Bague R10 | O-ring c 2.7 - d 12.1 - Ring R10 | Dichtung c 2,7 - d 12,1 - Ring R10 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 36 | Bague épaulée | Shouldered ring | Abnutzungsring | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 065823 |
| 37 | Idem 10 | Idem 10 | Ebenso 10 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | ⊕ |
| 38 | Vis CHC M6 x 12 | Screw CHC M6 x 12 | Schraube CHC M6 x 12 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ⊕ |
| 39 | Porte joint | Seal holder | Lippendichtung-sockel | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | A333660 |
| 40 | Joint à lèvres 15 x 25,5 x 4,6 FMP81 | Shaft seal 15 x 25.5 x 4.6 FMP81 | Lippendichtung 15 x 25,5 x 4,6 FMP81 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● * |
| 41 | Feutre | Felt | Filz | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● * |
| 41a | Joint torique c 3,6-d 34,1 | O-ring c 3.6-d 34.1 | Dichtung c 3,6 - d 34,1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● * |
| 42 | Bâti équipé* | Equipped central housing* | Pumpenträger einrichtet* | 1 | 1 | 1 | 1 | 1 | | | | | | 1 | | | | | | | | | 1033845 |
| 42 | Bâti équipé* | Equipped central housing* | Pumpenträger einrichtet* | | | | | | | 1 | | | | | | | | | | | | | 1033855 |
| 42 | Bâti équipé* | Equipped central housing* | Pumpenträger einrichtet* | | | | | | | | 1 | | | | | | | | | | | | 1058345 |
| 42 | Bâti équipé* | Equipped central housing* | Pumpenträger einrichtet* | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1058325 |
| 43 | Socle | Base | Fuss | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 108712 |
| 43 | Socle | Base | Fuss | | | | | 1 | | | | | | | | | | | | | | | 1071345 |
| 43a | Amortisseur | Shock mount | Schwingungsdämpfer | 4/4 | 4/4 | 4/4 | 4/4 | | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 4/4 | 065790 |
| 43a | Amortisseur | Shock mount | Schwingungsdämpfer | | | | | 4/4 | | | | | | | | | | | | | | | 082691 |
| 43b | Rondelle | Washer | Unterlegscheibe | | | | | 4/4 | | | | | | | | | | | | | | | ⊕ |
| 43c | Vis CHC M6 x 12 | Screw CHC M6 x 12 | Schraube CHC M6 x 12 | | | | | 4/4 | | | | | | | | | | | | | | | ⊕ |
| 44 | Idem 10 | Idem 10 | Ebenso 10 | 2/8 | 2/8 | 2/8 | 2/8 | | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | 2/8 | ⊕ |
| 45 | Idem 9 | Idem 9 | Ebenso 9 | 2/6 | 2/6 | 2/6 | 2/6 | | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | 2/6 | ⊕ |
| 46 | Tube lest d'air | Gas ballast tube | Gasballastrohr | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 104631 |
| 46 | Tube lest d'air | Gas ballast tube | Gasballastrohr | | | | | | | | | | | 1 | | | | | | | | | 065842 |
| 46 | Tube lest d'air | Gas ballast tube | Gasballastrohr | | | | | 1 | | | | | | 1 | | | | | | | | | 065839 |
| 47 | Joint torique c 1,9 - d 5,7 Bague R5 | O-ring c 1.9 - d 5.7 - Ring R5 | Dichtung c 1,9 - d 5,7 - Ring R5 | 2 | 2 | 2 | 2 | | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ● |
| 48 | Joint torique c 3 - d 28 | O-ring c 3 - d 28 | Dichtung c 3 - d 28 | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 49 | Traversée de cuve | Oil case feedthrough | Ölbehälterdurchfuhrung | 1 | 1 | 1 | 1 | | | | | | | | | | | | | | | | 102853 |
| 49 | Traversée de cuve | Oil case feedthrough | Ölbehälterdurchfuhrung | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | 102852 |
| 49 | Traversée de cuve | Oil case feedthrough | Ölbehälterdurchfuhrung | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 100952 |
| 52 | Vis M4 x 10 | Screw M4 x 10 | Schraube M4 x 10 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | ⊕ |
| 53 | Manchon lest d'air | Gas ballast sleeve | Gasballastmuffe | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 54 | Ressort lest d'air | Gas ballast spring | Gasballastfeder | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | | 1 | 1 | 1 | ■ |
| 55 | Bouchon de manoeuvre | Gas ballast knob | Gasballastknopf | 1 | 1 | 1 | 1 | | 1 | | | | | | | | | | | 1 | 1 | 1 | 102846 |
| 55 | Bouchon de manoeuvre | Gas ballast knob | Gasballastknopf | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | 102845 |
| 57 | Idem 52 | Idem 52 | Ebenso 52 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | 2/4 | ⊕ |
| 58 | Couvercle lest d'air | Gas ballast cover | Gasballastdeckel | 1 | 1 | 1 | 1 | | | | | | | | | | | | | | | | 107789 |
| 58 | Couvercle lest d'air | Gas ballast cover | Gasballastdeckel | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | | | | | | | | | 107790 |
| 58 | Couvercle lest d'air | Gas ballast cover | Gasballastdeckel | | | | | | | | | | | | | 1 | 1 | 1 | | | | | 107792 |
| 58 | Couvercle lest d'air | Gas ballast cover | Gasballastdeckel | | | | | 1 | | | | | | | | | | | | | | | 107793 |
| 59 | Idem 8 | Idem 8 | Ebenso 8 | 1/3 | 1/3 | 1/3 | 1/3 | | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | | | | | 1/3 | 1/3 | 1/3 | ■ |
| 59 | Idem 8 | Idem 8 | Ebenso 8 | | | | | | | | | | | | | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 052752 |
| 59a | Raccord rapide | Quick connect | Schnellkupplung | | | | | 1 | | | | | | | | | | | | | | | 107523 |

● Lot joints / Seal kit / Dichtungssatz ■ Kit de révision / Overhaul kit / Revision kit ⊕ Lot visserie / Screw kit / Schraubensatz ○ Lot palettes / Vane kit / Schiebersatz * Kit joint avant / Front seal kit / Vorderer Dichtungssatz


* Pour les pompes utilisées dans les détecteurs (sauf pompe 1005I), utiliser le bâti A0067315

* For pumps used in detectors (except 1005I pump), use A0067315 housing

* Für Pumpen, die in den Lecksuchgeräten verwendet werden (außer Pumpe 1005I), den Rahmen A0067315 verwenden


S - N

Plan du bloc fonctionnel (avec stator non flasqué) (D)
Pumping module drawing (with no flanged stator) (D)
Gesamtplan: Funktionsblock mit Stator und Flanschen (D)

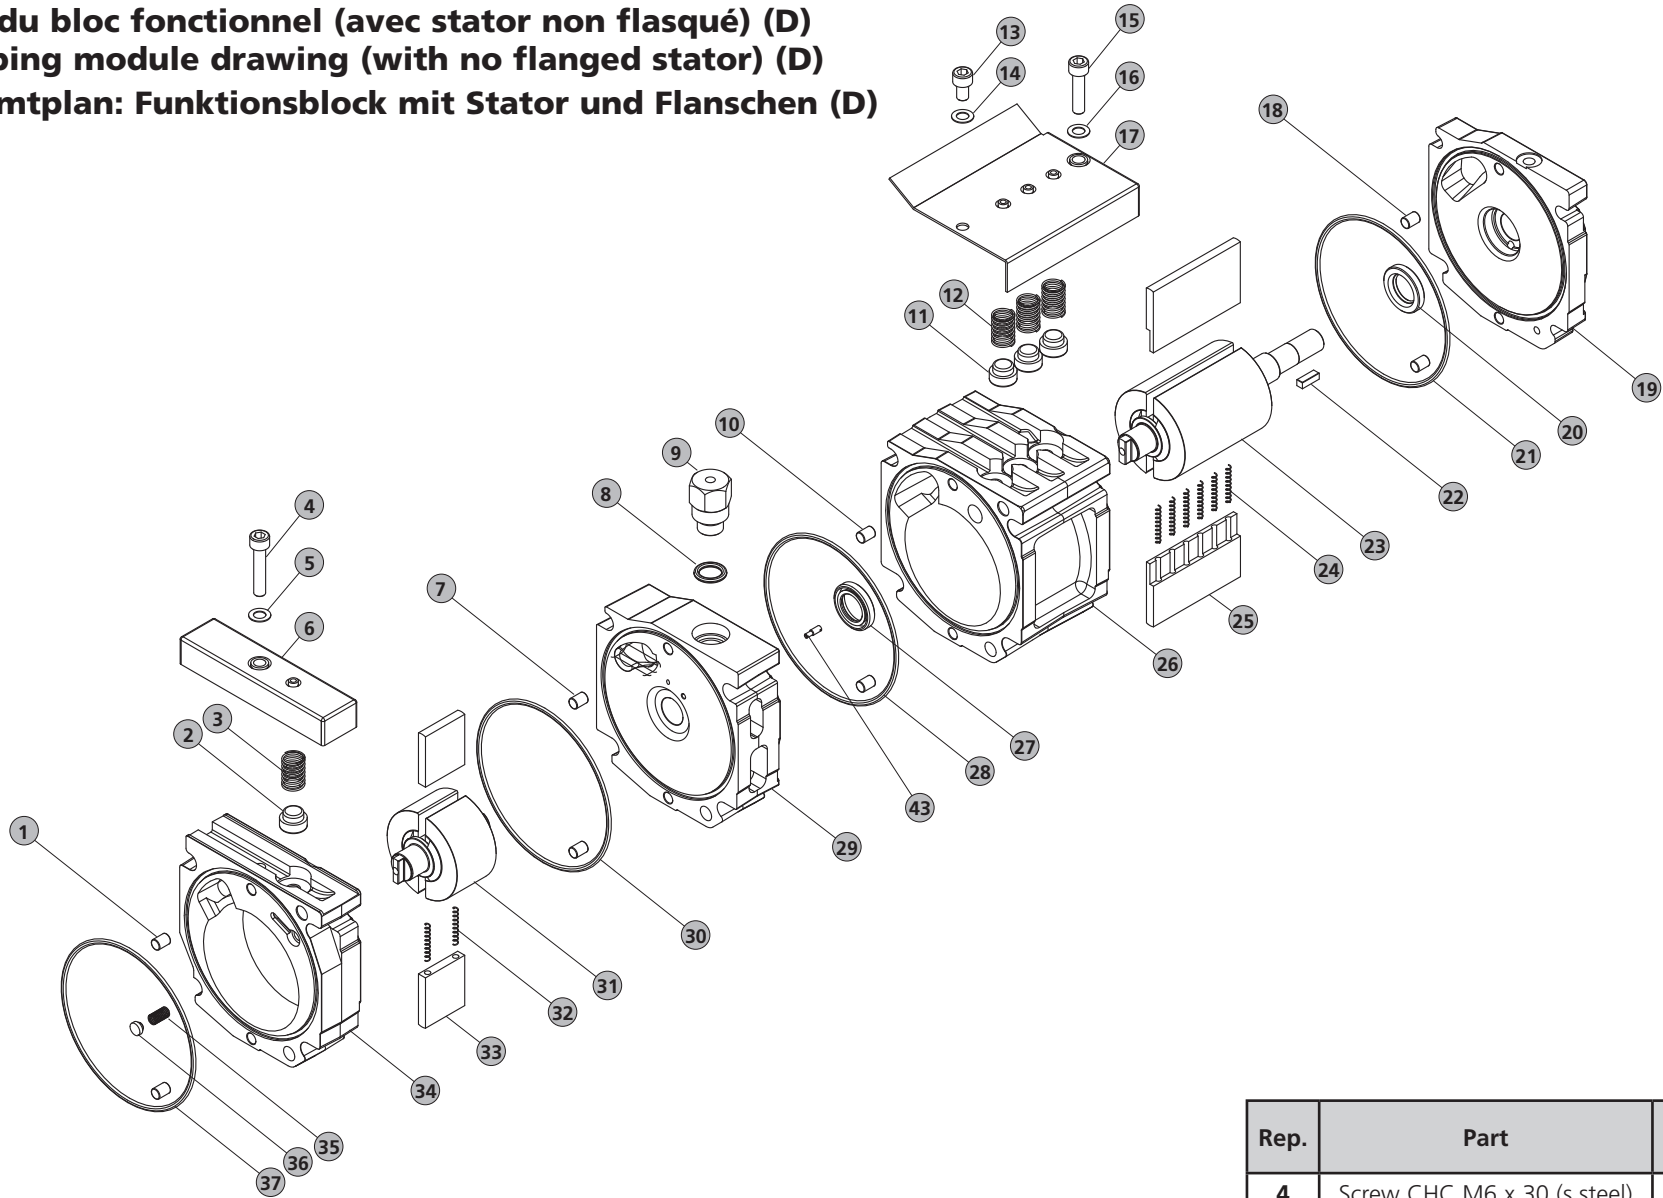

| Rep. | Part | Clamping torque (N·m) |
|------|-----------------------------|-----------------------|
| 4 | Screw CHC M6 x 30 (s.steel) | 9.0 |
| 13 | Screw CHC M6 x 10 (s.steel) | 9.0 |
| 15 | Screw CHC M6 x 25 (s.steel) | 9.0 |

Plan du bloc fonctionnel (avec stator non flasqué) (D)
Pumping module drawing (with no flanged stator) (D)
Gesamtplan: Funktionsblock mit Stator und Flanschen (D)

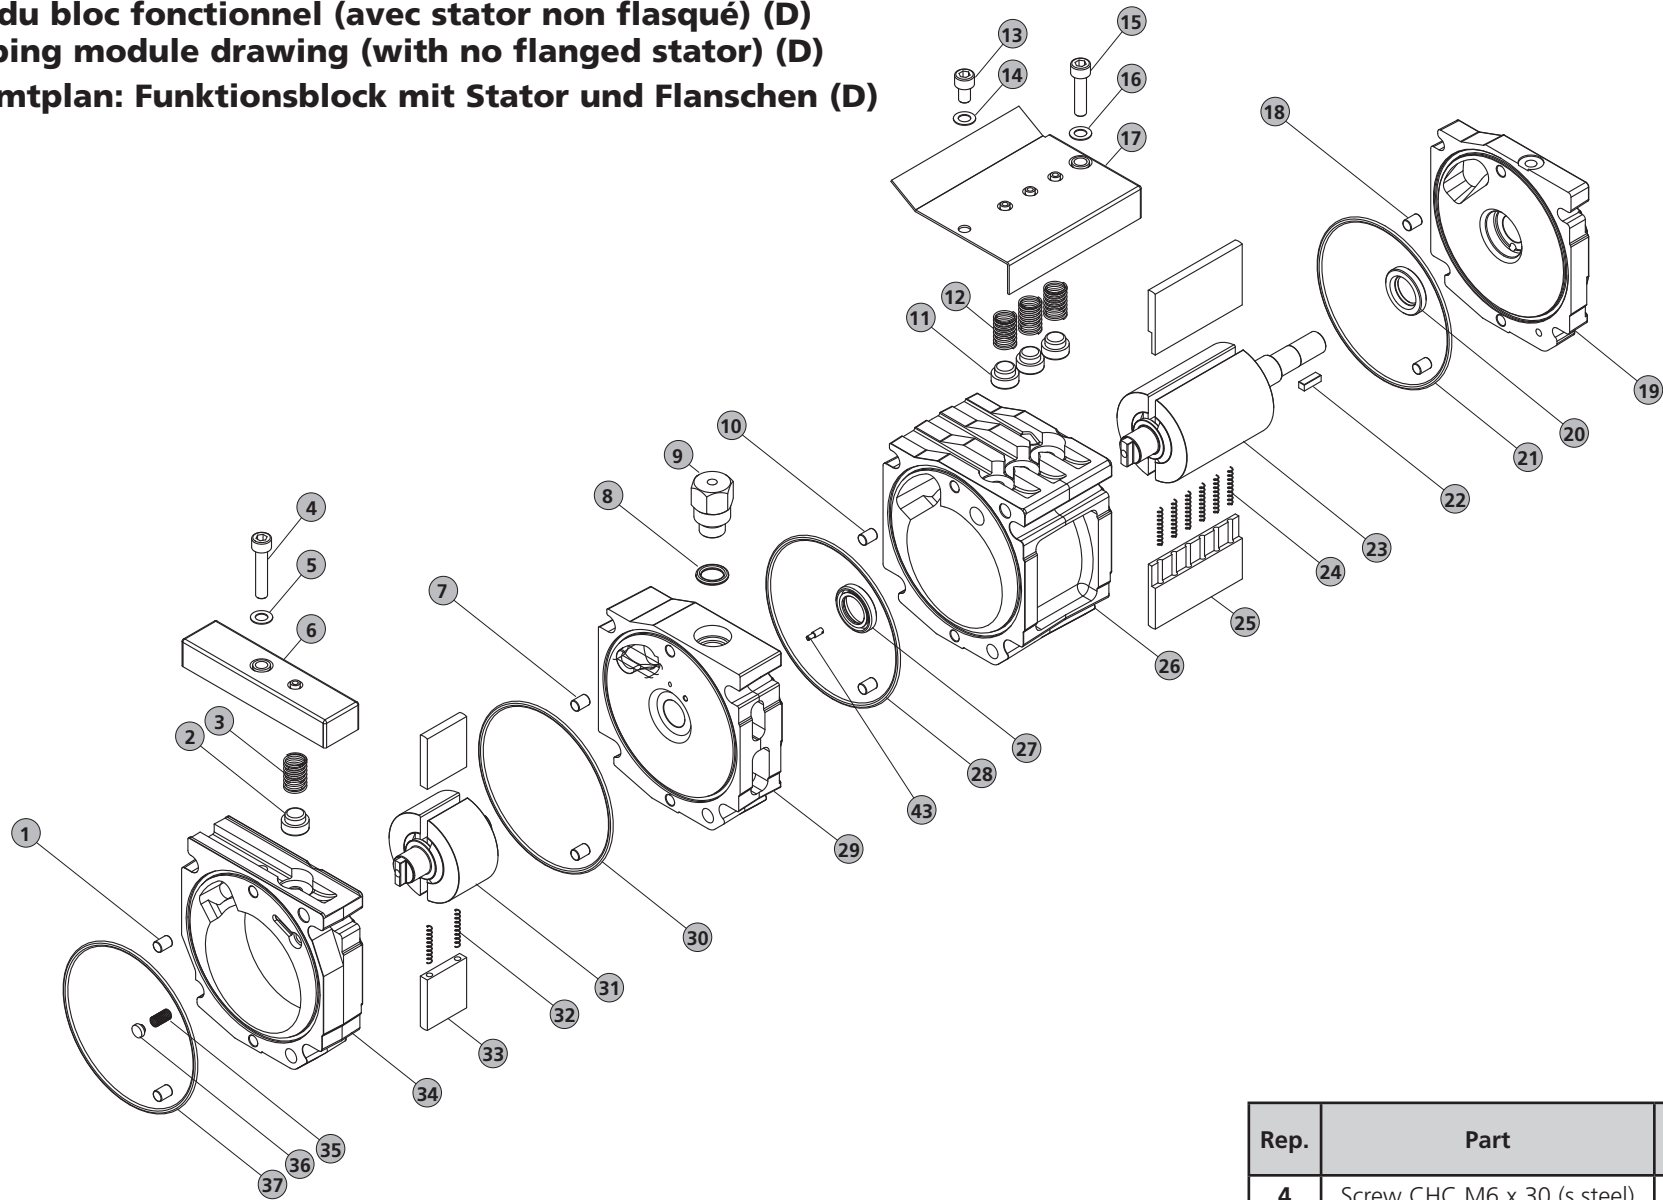

| Rep. | Part | Clamping torque (N·m) |
|------|-----------------------------|-----------------------|
| 4 | Screw CHC M6 x 30 (s.steel) | 9.0 |
| 13 | Screw CHC M6 x 10 (s.steel) | 9.0 |
| 15 | Screw CHC M6 x 25 (s.steel) | 9.0 |

Nomenclature du bloc fonctionnel (avec stator non flasqué) (D)

Pumping module list (with no flanged stator) (D)

Nomenklatur: Funktionsblock mit Stator und Flanschen (D)

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | | | | | | | | | | | | | | REF. P/N Bestell. Nr | | | | |
|-----|----------------------------|-----------------------------|-----------------------|-------------|--------|--------|--------|---------|----------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----------------------------|---------|---------|---------|----|
| | | | | 2005 I | 2010 I | 2015 I | 2021 I | 2005 SD | 2005 SDI | 2010 SD | 2015 SD | 2021 SD | 1005 SD | 1015 SD | 2010 C2 | 2015 C2 | 2021 C2 | 2005 C1 | 2010 C1 | | 2015 C1 | 2021 C1 | | |
| 25 | Palette BP | LP vane | Niederdruckschieber | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ●○ |
| 26 | Stator BP | LP stator | Niederdruckstator | 1 | | | | 1 | 1 | | | | | | | | | 1 | | | | | 103507S | |
| 26 | Stator BP | LP stator | Niederdruckstator | | 1 | | | | | 1 | | | | | | | | | | 1 | | | 103512S | |
| 26 | Stator BP | LP stator | Niederdruckstator | | | 1 | | | | | 1 | | | | | | | 1 | | | | 1 | 103510S | |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | 1 | | | | 1 | | | | | | | | | 1 | | | 103393S | |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | | | | | | 1 | | | | | | | | | | | 103409S | |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | | | | | | | 1 | | | | | | | | | | 103882 | |
| 27 | Idem 20 | Idem 20 | Ebenso 20 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | | | | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | ● | |
| 28 | Idem 21 | Idem 21 | Ebenso 21 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/2 | 1/2 | | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | ● | |
| 29 | Flasque médian | Central plate | Zwischenflansche | 1 | 1 | 1 | 1 | 1 | | | 1 | 1 | 1 | | | | | | | | | | 103408S | |
| 29 | Flasque médian | Central plate | Zwischenflansche | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103410S | |
| 29 | Flasque médian | Central plate | Zwischenflansche | | | | | | 1 | | | | | | | | | | | | | | 105639 | |
| 30 | Idem 21 | Idem 21 | Ebenso 21 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | | | | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | ● | |
| 31 | Rotor HP | HP rotor | Hochdruckrotor | | | | | | 1 | | | | | | | | | | | | | | 065853S | |
| 31 | Rotor HP | HP rotor | Hochdruckrotor | | | | | 1 | | 1 | 1 | 1 | | | | | | | | | | | 065852S | |
| 31 | Rotor HP | HP rotor | Hochdruckrotor | 1 | 1 | 1 | 1 | | | | | | | | | | | | | | | | 103417S | |
| 31 | Rotor HP | HP rotor | Hochdruckrotor | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 102854S | |
| 32 | Idem 24 | Idem 24 | Ebenso 24 | 2/4 | 2/6 | 2/8 | 2/8 | 2/4 | 2/4 | 2/6 | 2/8 | 2/8 | | | | 2/6 | 2/8 | 2/8 | 2/4 | 2/6 | 2/8 | 2/8 | ●○ | |
| 33 | Palette HP | HP vane | Hochdruckschieber | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | | | | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ●○* | |
| 34 | Stator HP | HP stator | Hochdruckstator | | | | | | 1 | | | | | | | | | | | | | | 065722S | |
| 34 | Stator HP | HP stator | Hochdruckstator | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103409S | |
| 35 | Ressort clapet anti-retour | Spring of the antisuck-back | Federrückschlagventil | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ■ | |
| 36 | Clapet anti-retour | Antisuck-back device | Rückschlagventil | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 065798 | |
| 37 | Idem 21 | Idem 21 | Ebenso 21 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | | | | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | ● | |
| 43 | Gicleur | Injector | Düse | | | | | | | | | | | | | | | | | | | | 105091 | |

● Lots de joints / Seal kit / Dichtungssatz

■ Kit de révision / Overhaul kit / Revision kit


⊕ Lot visserie / Screw kit / Schraubensatz

○ Lot palettes / Vane kit / Schieberratz

* Kit joint avant / Front seal kit / Dichtungssatz

* sauf C2 / except C2 / ausgenommen C2

Plan du bloc fonctionnel (avec stator flasqué) (C)
Pumping module drawing (with flanged stator) (C)
Gesamtplan: Funktionsblock mit Stator-Monoblock (C)

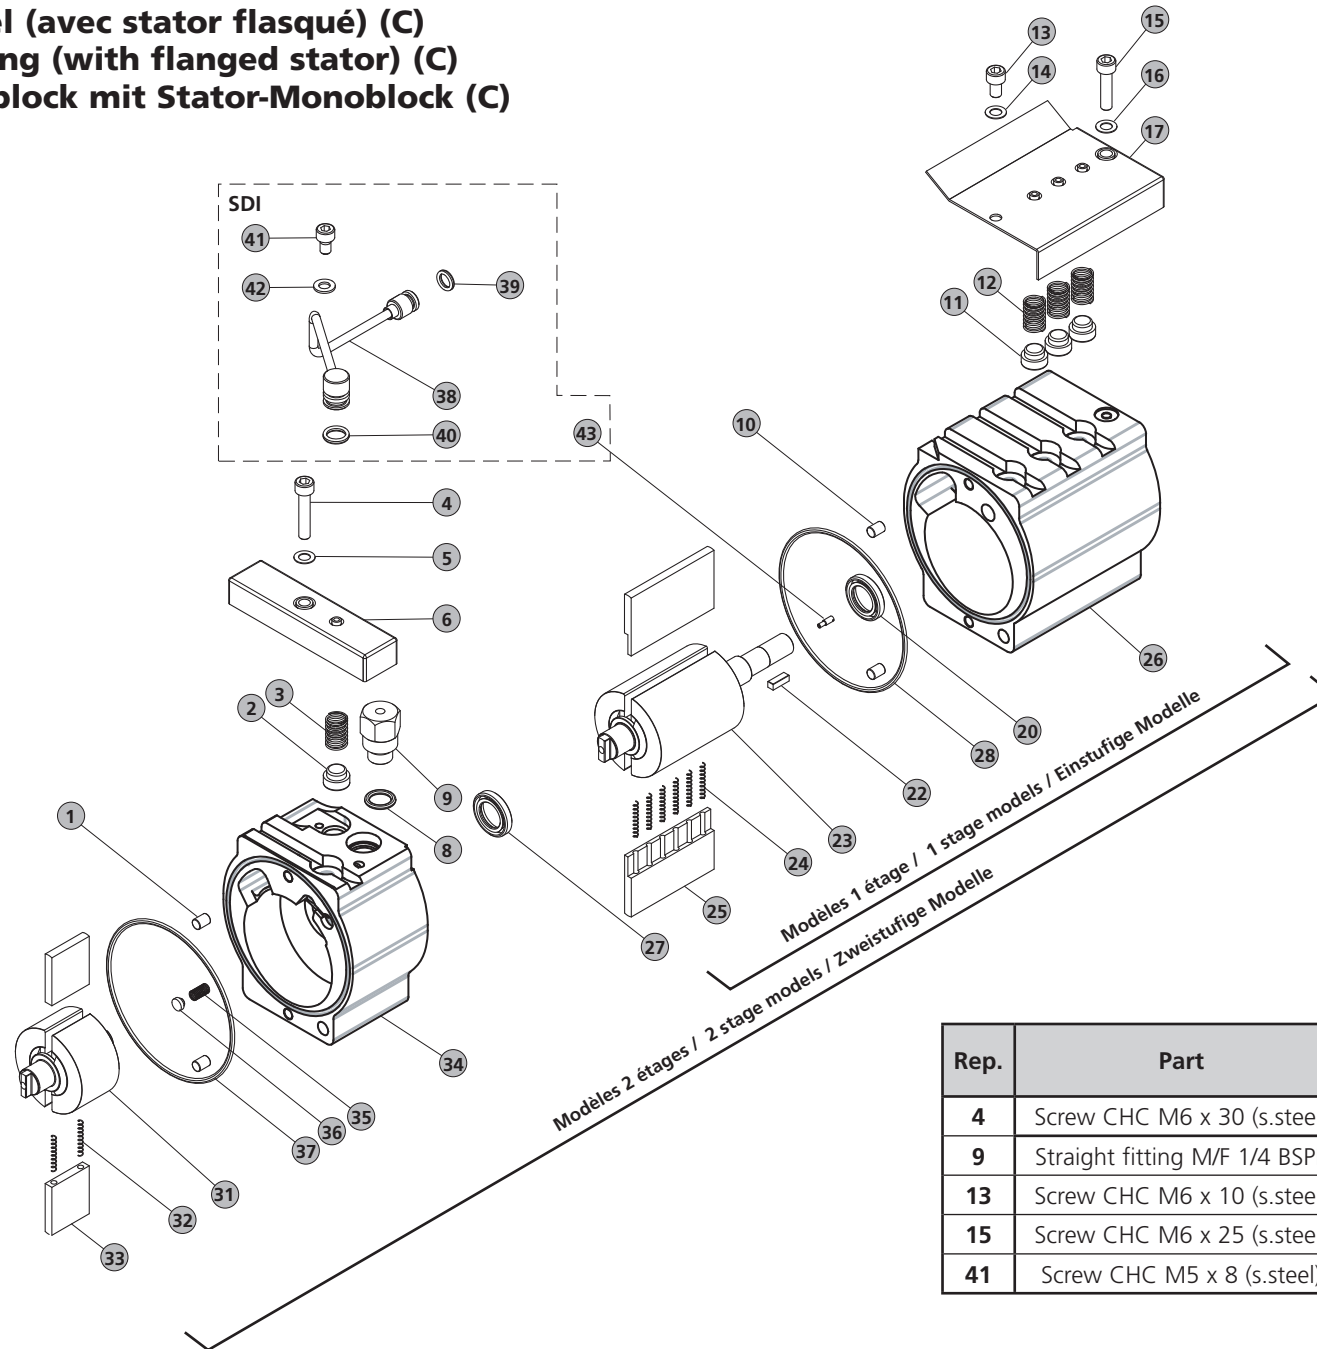

| Rep. | Part | Clamping torque (N·m) |
|------|-------------------------------|-----------------------|
| 4 | Screw CHC M6 x 30 (s.steel) | 9.0 |
| 9 | Straight fitting M/F 1/4 BSPP | 18.0 |
| 13 | Screw CHC M6 x 10 (s.steel) | 9.0 |
| 15 | Screw CHC M6 x 25 (s.steel) | 9.0 |
| 41 | Screw CHC M5 x 8 (s.steel) | 7.0 |

Nomenclature du bloc fonctionnel (avec stator flasqué) (C)


Pumping module list (with flanged stator) (C)

Nomenklatur: Funktionsblock mit Stator-Monoblock (C)

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | | | | | | | | | | | | | | | REF. P/N Bestell. Nr | | | |
|-----|---|---------------------------------|-----------------------------------|-------------|--------|--------|--------|--------|---------|----------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----------------------------|---------|---------|----------|
| | | | | 2005 I | 2010 I | 2015 I | 2021 I | 1015 I | 2005 SD | 2005 SDI | 2010 SD | 2015 SD | 2021 SD | 1005 SD | 1015 SD | 2010 C2 | 2015 C2 | 2021 C2 | 2005 C1 | 2010 C1 | | 2015 C1 | 2021 C1 | |
| 1 | Goupille D6 LG8 | Centering pin D6 LG8 | Zentrierstift | 1/4 | 1/4 | 1/4 | 1/5 | | 1/5 | 1/5 | 1/5 | 1/4 | 1/4 | | | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/5 | 1/5 | ■ | |
| 2 | Soupape | Valve | Auslassventil | 1 | 1/3 | 1/4 | 1/4 | | 1 | 1 | 1/3 | 1/4 | 1/4 | | | 1/3 | 1/4 | 1/4 | 1/2 | 1/3 | 1/4 | 1/4 | ● | |
| 3 | Ressort de soupape | Valve spring | Ventilfeder | 1 | 1/3 | 1/4 | 1/4 | | 1 | 1 | 1/3 | 1/4 | 1/4 | | | 1/3 | 1/4 | 1/4 | 1/2 | 1/3 | 1/4 | 1/4 | ■ | |
| 4 | Vis CHC M6 x 30 | Screw CHC M6 x 30 | Schraube CHC M6 x 30 | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ✦ | |
| 4 | Vis CHC M6 x 10 | Screw CHC M6 x 10 | Schraube CHC M6 x 10 | | | | | | | | | | | | | | | | | | | | ✦ | |
| 5 | Rondelle | Washer | Unterlegscheibe | 1 | 1/2 | 1/2 | 1/2 | | 1 | 1 | 1/2 | 1/2 | 1/2 | | | 1/2 | 1/2 | 1/2 | 1 | 1/2 | 1/2 | 1/2 | ✦ | |
| 6 | Capot de soupape HP | Valve cover HP | Ventilgehäusedeckel HD | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | A332166 | |
| 8 | Joint torique c 2,7 - d 10,5 - Bague R9 | O-ring c 2.7 - d 10.5 - Ring R9 | Dichtung c 2,7 - d 10,5 - Ring R9 | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● | |
| 9 | Bouchon support capot | Cover holder | Gehäusedeckelhalter | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | 1 | 1 | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103544 | |
| 10 | Idem 1 | Idem 1 | Ebenso 1 | 1/4 | 1/4 | 1/4 | 1/4 | | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/2 | 1/2 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | ■ |
| 11 | Idem 2 | Idem 2 | Ebenso 2 | | 2/3 | 3/4 | 3/4 | 3 | | | 2/3 | 3/4 | 3/4 | 1 | 3 | 2/3 | 3/4 | 3/4 | 1/2 | 2/3 | 3/4 | 3/4 | ● | |
| 12 | Idem 3 | Idem 3 | Ebenso 3 | | 2/3 | 3/4 | 3/4 | 3 | | | 2/3 | 3/4 | 3/4 | 1 | 3 | 2/3 | 3/4 | 3/4 | 1/2 | 2/3 | 3/4 | 3/4 | ■ | |
| 13 | Vis CHC M6 x 10 | Screw CHC M6 x 10 | Schraube CHC M6 x 10 | | 1 | 1 | 1 | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | | 1 | 1 | 1 | ✦ | |
| 14 | Rondelle | Washer | Unterlegscheibe | | 1/2 | 1/2 | 1/2 | | | | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | | | 1/2 | 1/2 | ✦ | |
| 15 | Vis CHC M6 x 25 | Screw CHC M6 x 25 | Schraube CHC M6 x 25 | | 1 | 1 | 1 | 2 | | | 1 | 1 | 1 | 2 | 2 | 1 | 1 | 1 | | 1 | 1 | 1 | ✦ | |
| 16 | Rondelle | Washer | Unterlegscheibe | | 1/3 | 1/3 | 1/3 | 2/2 | | | 1/3 | 1/3 | 1/3 | 1/2 | 2/2 | 1/3 | 1/3 | 1/3 | | 1/3 | 1/3 | 1/3 | ✦ | |
| 17 | Capot de soupape BP | Valve cover LP | Ventilgehäusedeckel ND | | 1 | | | | | | 1 | | | | | 1 | | | | | 1 | | A332176 | |
| 17 | Capot de soupape BP | Valve cover LP | Ventilgehäusedeckel ND | | | 1 | | | | | | 1 | | | | | 1 | | | | 1 | | A332266 | |
| 17 | Capot de soupape BP | Valve cover LP | Ventilgehäusedeckel ND | | | | 1 | | | | | | 1 | | | | | 1 | | | | 1 | A332175 | |
| 17 | Capot de soupape | Valve cover | Ventilgehäusedeckel | | | | | | | | | | | 1 | | | | | | | | | A332900 | |
| 17 | Capot de soupape | Valve cover | Ventilgehäusedeckel | | | | | 1 | | | | | | | | | | | | | | | A216503 | |
| 20 | Joint à lèvres 15 x 25,5 x 4,6 | Shaft seal 15 x 25.5 x 4.6 | Lippendichtung 15 x 25,5 x 4,6 | 1/2 | 1/2 | 1/2 | 1/2 | 1 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1 | 1 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | ● |
| 22 | Clavette Parallèle A4 x 4 x 12 | Shaft key A4 x 4 x 12 | Nutenstein A4 x 4 x 12 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ■ |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | 1 | | | | | 1 | 1 | | | | | | | | | | | | | | 065745S |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | | 1 | | | | | | 1 | | | | | | | | | | | | | 065749S |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | | | 1 | | | | | | 1 | | | | | | | | | | | | 065750S |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | | | | 1 | | | | | | 1 | | | | | | | | | | | 065751S |
| 23 | Rotor | Rotor | Rotor | | | | | | | | | | | 1 | | | | | | | | | | 103880S |
| 23 | Rotor | Rotor | Rotor | | | | | 1 | | | | | | | 1 | | | | | | | | | 103569S |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | | | | | | | | | | | | | 1 | | | | | 1 | | | 065801S |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | | | | | | | | | | | | | | 1 | | | | | 1 | | 065802S |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | | | | | | | | | | | | | | | 1 | | | | 1 | | 065803S |
| 23 | Rotor BP | LP rotor | Niederdruckrotor | | | | | | | | | | | | | | | | 1 | | | | | 065601S |
| 24 | Ressort de palette | Vane spring | Schieberfeder | 2/4 | 4/6 | 6/8 | 6/8 | 6 | 2/4 | 2/4 | 4/6 | 6/8 | 6/8 | 2 | 6 | 4/6 | 6/8 | 6/8 | 2/4 | 4/6 | 6/8 | 6/8 | ■○ | |
| 25 | Palette BP | LP vane | Niederdruckschieber | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ■○ |
| 26 | Stator BP | LP stator | Niederdruckstator | 1 | | | | | 1 | 1 | | | | | | | | | | | | | | A006001S |
| 26 | Stator BP | LP stator | Niederdruckstator | | 1 | | | | | | 1 | | | | | | | | | | | | | A006000S |
| 26 | Stator BP | LP stator | Niederdruckstator | | | 1 | | | | | | 1 | | | | | | | | | | | | A005999S |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | 1 | | | | | | 1 | | | | | | | | | | | A005997S |
| 26 | Stator | Stator | Stator | | | | | | | | | | | 1 | | | | | | | | | | A006465S |

● Lots de joints / Seal kit / Dichtungssatz ■ Kit de révision / Overhaul kit / Revision kit ✦ Lot visserie / Screw kit / Schraubensatz ○ Lot palettes / Vane kit / Schiebessatz * Kit joint avant / Front seal kit / Dichtungssatz

Plan du bloc fonctionnel (avec stator flasqué) (C)
Pumping module drawing (with flanged stator) (C)
Gesamtplan: Funktionsblock mit Stator-Monoblock (C)

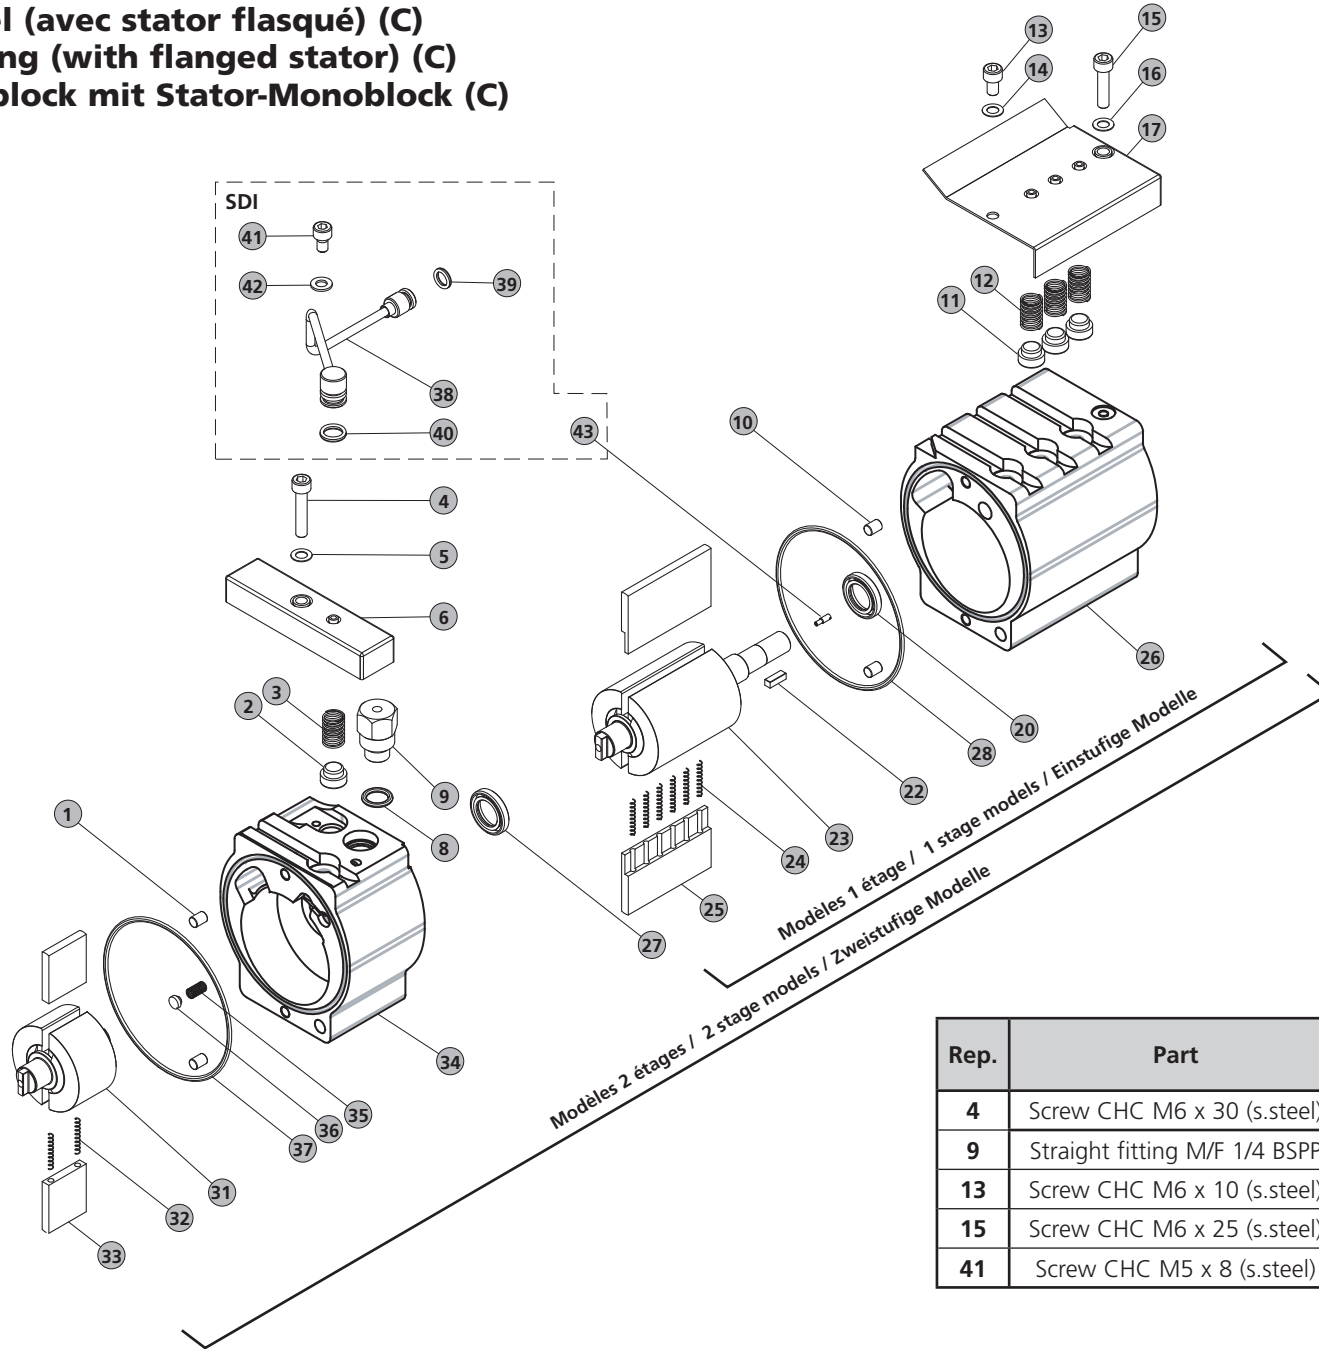

| Rep. | Part | Clamping torque (N·m) |
|------|-------------------------------|-----------------------|
| 4 | Screw CHC M6 x 30 (s.steel) | 9.0 |
| 9 | Straight fitting M/F 1/4 BSPP | 18.0 |
| 13 | Screw CHC M6 x 10 (s.steel) | 9.0 |
| 15 | Screw CHC M6 x 25 (s.steel) | 9.0 |
| 41 | Screw CHC M5 x 8 (s.steel) | 7.0 |

Nomenclature du bloc fonctionnel (avec stator flasqué) (C)

Pumping module list (with flanged stator) (C)

Nomenklatur: Funktionsblock mit Stator-Monoblock (C)

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | | | | | | | | | | | | | | REF. P/N Bestell. Nr | | | | | |
|-----|-----------------------------|-----------------------------|------------------------|-------------|--------|--------|--------|--------|---------|----------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----------------------------|---------|---------|---------|-----|----------|
| | | | | 2005 I | 2010 I | 2015 I | 2021 I | 1015 I | 2005 SD | 2005 SDI | 2010 SD | 2015 SD | 2021 SD | 1005 SD | 1015 SD | 2010 C2 | 2015 C2 | 2021 C2 | 2005 C1 | | 2010 C1 | 2015 C1 | 2021 C1 | | |
| 26 | Stator | Stator | Stator | | | | | 1 | | | | | | | 1 | | | | | | | | | | A006466S |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | | | | | | | | | | | | 1 | | | | | | | A006037S |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | | | | | | | | | | | 1 | | | | | 1 | | | A006038S |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | | | | | | | | | | | | | | | | | 1 | | A006039S |
| 26 | Stator BP | LP stator | Niederdruckstator | | | | | | | | | | | | | | | | | | | | | 1 | A006040S |
| 27 | Idem 20 | Idem 20 | Ebenso 20 | 1/2 | 1/2 | 1/2 | 1/2 | | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | | | | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | ● |
| 28 | Joint torique c 2 - d 90 | O-ring c 2 - d 90 | Dichtung c 2 - d 90 | 1/2 | 1/2 | 1/2 | 1/2 | 1 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1 | 1 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | 1/2 | ● |
| 31 | Rotor HP | HP rotor | Hochdruckrotor | | | | | | | 1 | 1 | 1 | 1 | 1 | | | | | | | | | | | 065852S |
| 31 | Rotor HP | HP rotor | Hochdruckrotor | 1 | 1 | 1 | 1 | | | | | | | | | | | | | | | | | | 103417S |
| 31 | Rotor HP | HP rotor | Hochdruckrotor | | | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 102854S |
| 32 | Idem 24 | Idem 24 | Ebenso 24 | 2/4 | 2/6 | 2/8 | 2/8 | | 2/4 | 2/4 | 2/6 | 2/8 | 2/8 | | | | 2/6 | 2/8 | 2/8 | 2/4 | 2/6 | 2/8 | 2/8 | ■○ | |
| 33 | Palette HP | HP vane | Hochdruckschieber | 2 | 2 | 2 | 2 | | 2 | 2 | 2 | 2 | 2 | | | | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ■○ |
| 34 | Stator HP | HP stator | Hochdruckstator | 1 | 1 | 1 | 1 | | 1 | | | 1 | 1 | 1 | | | | | | | | | | | A005996S |
| 34 | Stator HP | HP stator | Hochdruckstator | | | | | | | | | | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | A006042S |
| 34 | Stator HP | HP stator | Hochdruckstator | | | | | | | | | | | | | | | | | | | | | | A006496S |
| 35 | Ressort clapet anti-retour | Spring of the antisuck-back | Federrückschlagventil | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ■ |
| 36 | Clapet anti-retour | Antisuck-back device | Rückschlagventil | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 065798 |
| 37 | Idem 28 | Idem 28 | Ebenso 28 | 1/4 | 1/4 | 1/4 | 1/4 | | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | | | | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | 1/4 | ● |
| 38 | Tube pompage | Sniffer pipe | Gaseinlassleitung | | | | | | | | | | | | | | | | | | | | | | 065627 |
| 39 | Joint torique c 1,9 - d 7,2 | O-ring c 1,9 - d 7,2 | Dichtung c 1,9 - d 7,2 | | | | | | | | | | | | | | | | | | | | | | ● |
| 40 | Joint torique c 1,9 - d 8,9 | O-ring c 1,9 - d 8,9 | Dichtung c 1,9 - d 8,9 | | | | | | | | | | | | | | | | | | | | | | ● |
| 41 | Vis CHC M5 x 8 | Screw CHC M5 x 8 | Schraube CHC M5 x 8 | | | | | | | | | | | | | | | | | | | | | | ✚ |
| 42 | Rondelle M5 | Washer M5 | Unterlegscheibe M5 | | | | | | | | | | | | | | | | | | | | | | ✚ |
| 43 | Gicleur | Injector | Düse | | | | | | | | | | | | | | | | | | | | | | 105091 |

● Lots de joints / Seal kit / Dichtungssatz


■ Kit de révision / Overhaul kit / Revision kit

✚ Lot visserie / Screw kit / Schraubensatz

○ Lot palettes / Vane kit / Schiebersatz

* Kit joint avant / Front seal kit / Dichtungssatz

Plan du système de lubrification pompe à huile (A)
Oil pump system drawing (A)
Ölpumpensystem Gesamtplan (A)

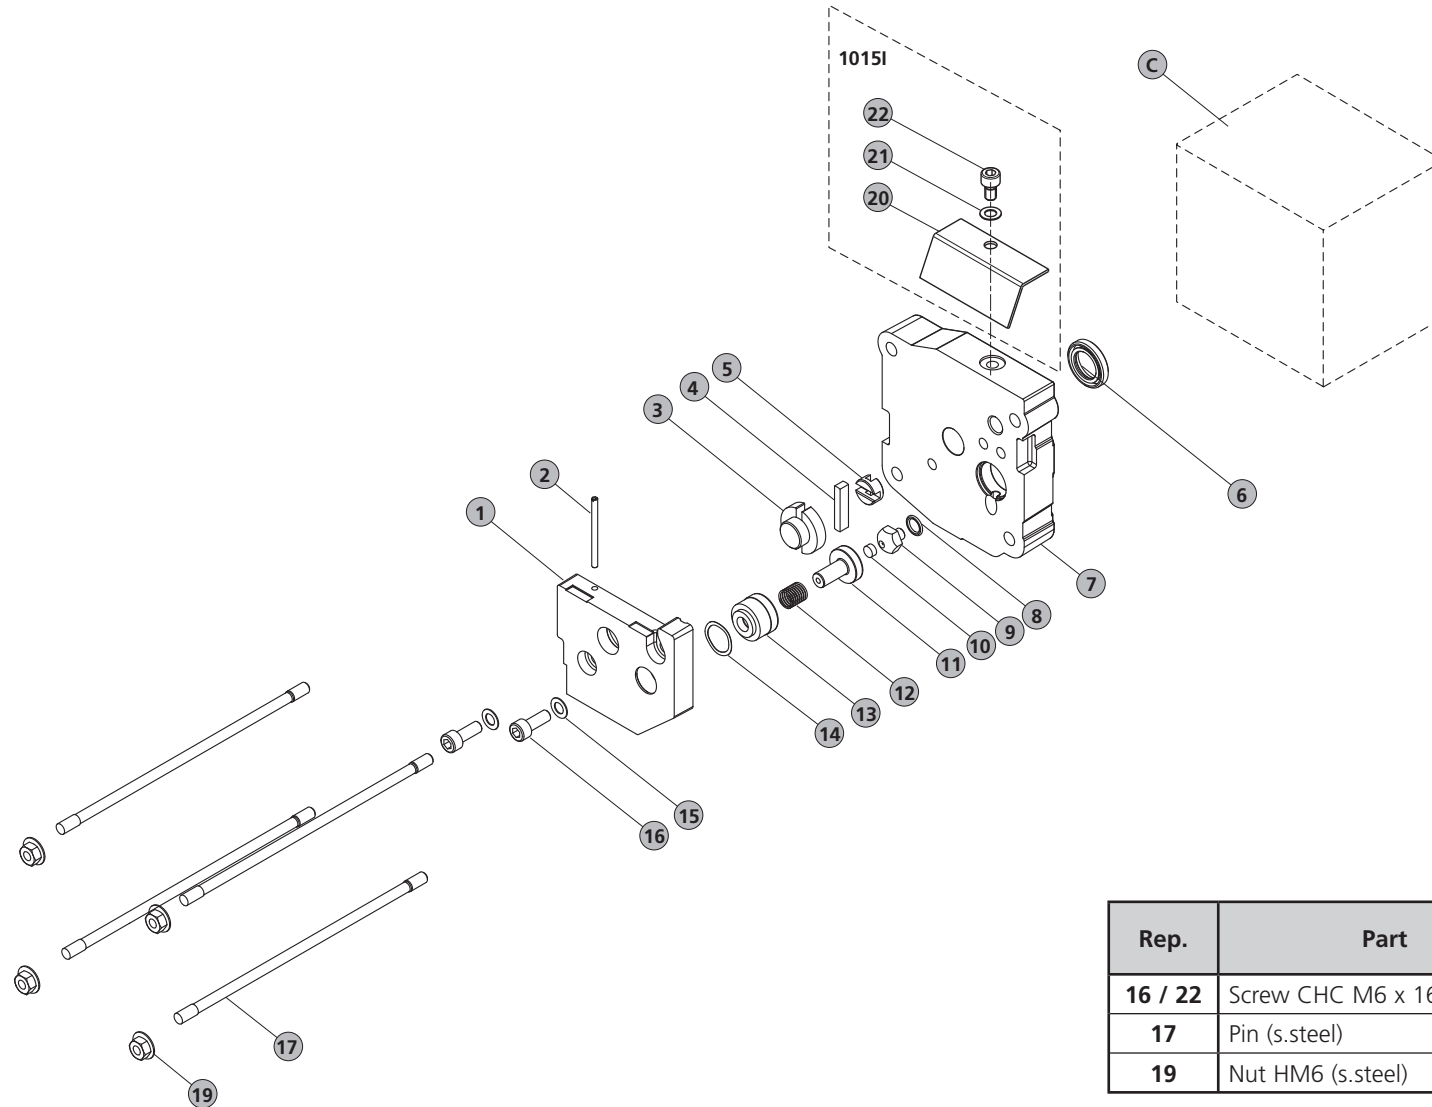

| Rep. | Part | Clamping torque (N·m) |
|---------|-----------------------------|-----------------------|
| 16 / 22 | Screw CHC M6 x 16 (s.steel) | 9.0 |
| 17 | Pin (s.steel) | 14.0 |
| 19 | Nut HM6 (s.steel) | 9.5 |

Nomenclature du système de lubrification pompe à huile / Oil pump system part list / Ölpumpsystem Nomenklatur

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | | | | | | | | | | | REF. P/N Bestell. Nr | | | | | | | | | | |
|-----|--------------------------------|---------------------------------|--------------------------------|-------------|--------|--------|--------|--------|---------|---------|---------|---------|---------|---------|---------|---------|----------------------------|---|---|---|---|---|---|---|---|---|---------|
| | | | | 2005 I | 2010 I | 2015 I | 2021 I | 1015 I | 1015 SD | 2010 C2 | 2015 C2 | 2021 C2 | 2005 C1 | 2010 C1 | 2015 C1 | 2021 C1 | | | | | | | | | | | |
| 1 | Couvercle pompe à huile | Oil pump cover | Ölpumpendeckel | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103416 |
| 2 | Tube entrée d'air | Air admission tube | Lufteinlass | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 104334 |
| 3 | Rotor pompe à huile | Oil pump rotor | Ölpumpenrotor | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103412 |
| 4 | PaLETTE pompe à huile | Oil pump vane | Ölpumpenschieber | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ■ □ |
| 5 | Joint de oldham | Oldham coupling | Oldham-Kupplung | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103413 |
| 6 | Joint à lèvres 15 x 25,5 x 4,6 | Shaft seal 15 x 25.5 x 4.6 | Lippendichtung 15 x 25,5 x 4,6 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 7 | Flasque arrière | Rear plate | Hintererflansche | 1 | 1 | 1 | 1 | | | | | | | | | | | | | | | | | | | | 1034115 |
| 7 | Flasque arrière | Rear plate | Hintererflansche | | | | | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1033985 |
| 8 | Joint torique c 1,5 - d 7,5 | O-ring c 1.5 - d 7.5 | Dichtung c 1,5 - d 7,5 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 9 | Siège | Seat | Sitz | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 103389 |
| 10 | Clapet anti-retour | Antisuck-back device | Rückschlagventil | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 11 | Piston anti-retour | Antisuck-back piston | Kolber | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 102962 |
| 12 | Ressort d'étanchéité | Spring | Feder | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ■ |
| 13 | Cylindre anti-retour | Oil pump antisuck-back cylinder | Rückschlagzylinder | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 102963 |
| 14 | Rondelle élastique | Spring washer | Scheibe | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 15 | Rondelle | Washer | Unterlegscheibe | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ⊕ |
| 16 | Vis CHC M6 x 16 | Screw CHC M6 x 16 | Schraube CHC M6 x 16 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | ⊕ |
| 17 | Goujon M6-106 / 12 | Pin M6-106 / 12 | Stift M6-106 / 12 | | | | | | 4 | 4 | | | | | | | | | | | | | | | | | 103524 |
| 17 | Goujon M6-129 / 19 | Pin M6-129 / 19 | Stift M6-129 / 19 | 4 | | | | | | | | | | | | | | | 4 | | | | | | | | 102855 |
| 17 | Goujon M6-142 / 12 | Pin M6-142 / 12 | Stift M6-142 / 12 | | 4 | | | 4 | | | | | | | | | | | | | 4 | | | | | | 065806 |
| 17 | Goujon M6-164 / 12 | Pin M6-164 / 12 | Stift M6-164 / 12 | | | 4 | | | | | | 4 | | | | | | | | | | 4 | | | | | 065805 |
| 17 | Goujon M6-187 / 12 | Pin M6-187 / 12 | Stift M6-187 / 12 | | | | 4 | | | | | | 4 | | | | | | | | | | 4 | | | | 065804 |
| 19 | Ecrou à embase HM6 | Shouldered nut HM6 | Schraubenmutter HM6 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | ⊕ |
| 20 | Tole pare-eclat | Oil protective cover | Ölgehäusedeckel | | | | | 1 | 1 | | | | | | | | | | | | | | | | | | 104633 |
| 21 | Rondelle | Washer | Unterlegscheibe | | | | | 1 | 1 | | | | | | | | | | | | | | | | | | - |
| 22 | Vis CHC M6 x 10 | Screw CHC M6 x 10 | Schraube CHC M6 x 10 | | | | | 1 | 1 | | | | | | | | | | | | | | | | | | - |

● Lots de joints / Seal kit / Dichtungssatz


■ Kit de révision / Overhaul kit / Revision kit

⊕ Lot visserie / Screw kit / Schraubensatz

□ Lot palettes pompe à huile / Oil vane pump kit / Ölpumpenschiebersatz

Sous-ensemble A / Subassembly A / Gesamtplan A

Plan du système de lubrification levier moulinet (B)
Oil system drawing (B)
Flügenrech-Ölsystem Gesamtplan (B)

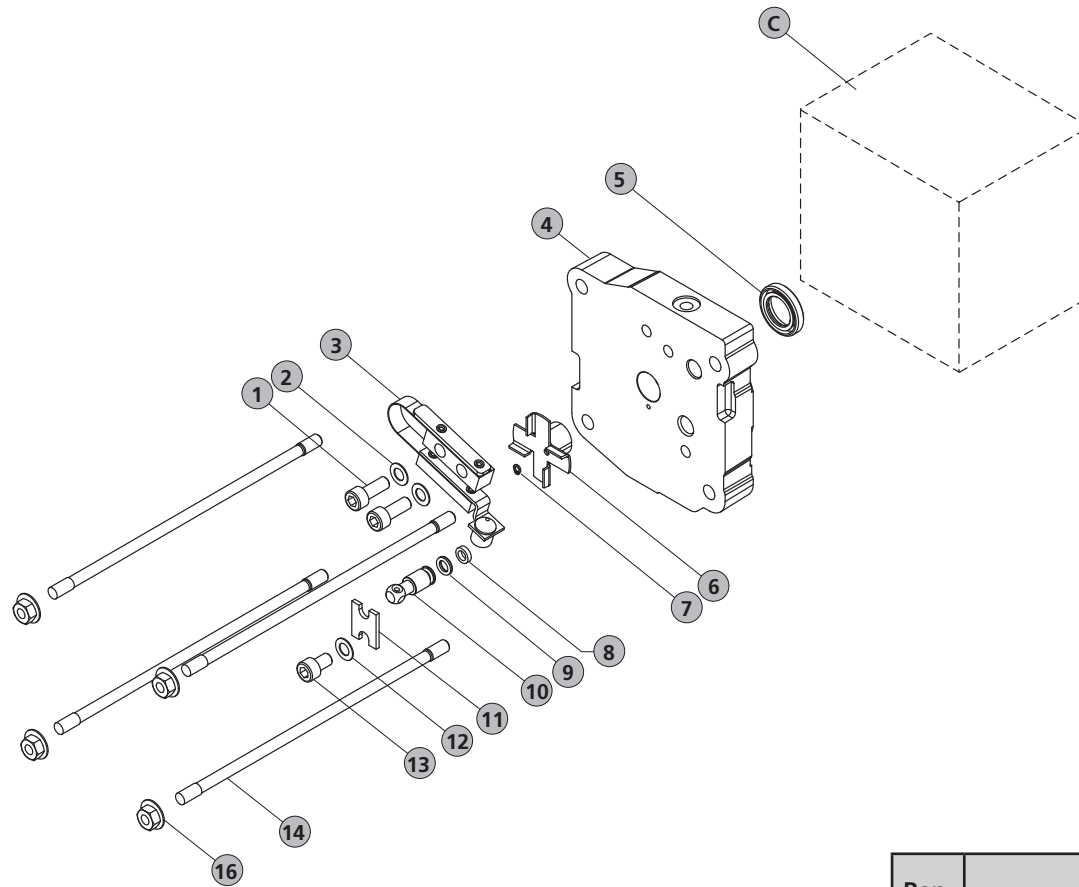

| Rep. | Part | Clamping torque (N·m) |
|------|-----------------------------|-----------------------|
| 1 | Screw CHC M6 x 16 (s.steel) | 9.0 |
| 13 | Screw CHC M6 x 10 (s.steel) | 9.0 |
| 14 | Pin (s.steel) | 14.0 |
| 16 | Nut (s.steel) | 9.5 |

Nomenclature du système de lubrification levier moulinet / Oilsystem part list / Flügenrechölssystem Nomenklatur

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | | | | REF. P/N Bestell. Nr |
|-----|--|--------------------------------|----------------------------------|-------------|----------|---------|---------|---------|---------|----------------------------|
| | | | | 2005 SD | 2005 SDI | 2010 SD | 2015 SD | 2021 SD | 1005 SD | |
| 1 | Vis CHC M6 x 16 | Screw CHC M6 x 16 | Schraube CHC M6 x 16 | 2 | 2 | 2 | 2 | 2 | 2 | ✚ |
| 2 | Rondelle | Washer | Unterlegscheibe | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | 2/3 | ✚ |
| 3 | Levier oscillant | Equipped lever | Hebel | 1 | 1 | 1 | 1 | 1 | 1 | ■ |
| 4 | Flasque arrière | Rear plate | Hintererflansche | 1 | 1 | 1 | 1 | 1 | 1 | 1034855 |
| 5 | Joint à lèvres 15 x 25,5 x 4,6 | Shaft seal 15 x 25.5 x 4.6 | Lippendichtung 15 x 25,5 x 4,6 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 6 | Came moulinet | Impeller | Flügenrech | 1 | 1 | 1 | 1 | 1 | 1 | 052721 |
| 7 | Bague d'arrêt | Clips | Sprengring | 1 | 1 | 1 | 1 | 1 | 1 | ■ |
| 8 | Rondelle | Washer | Unterlegscheibe | 1 | | 1 | 1 | 1 | | 052758 |
| 8 | Gicleur | Jet | Düse | | | | | | 1 | 102910 |
| 8 | Gicleur | Jet | Düse | | 1 | | | | | 103314 |
| 9 | Joint torique c 1,9 - d 5,7 - Bague R5 | O-ring c 1.9 - d 5.7 - Ring R5 | Dichtung c 1,9 - d 5,7 - Ring R5 | 1 | 1 | 1 | 1 | 1 | 1 | ● |
| 10 | Siège de clapet | Seat | Ventilsitz | 1 | 1 | 1 | 1 | 1 | 1 | 052718 |
| 11 | Bride | Flange | Klammer | 1 | 1 | 1 | 1 | 1 | 1 | 052569 |
| 12 | Idem 2 | Idem 2 | Ebenso 2 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | 1/3 | ✚ |
| 13 | Vis CHC M6 x 10 | Screw CHC M6 x 10 | Schraube CHC M6 x 10 | 1 | 1 | 1 | 1 | 1 | 1 | ✚ |
| 14 | Goujon M6-129 / 19 | Pin M6-129 / 19 | Stift M6-129 / 19 | 4 | 4 | | | | | 102855 |
| 14 | Goujon M6-142 / 12 | Pin M6-142 / 12 | Stift M6-142 / 12 | | | 4 | | | | 065806 |
| 14 | Goujon M6-164 / 12 | Pin M6-164 / 12 | Stift M6-164 / 12 | | | | 4 | | | 065805 |
| 14 | Goujon M6-187 / 12 | Pin M6-187 / 12 | Stift M6-187 / 12 | | | | | 4 | | 065804 |
| 14 | Goujon M6-72 / 19 | Pin M6-72 / 19 | Stift M6-72 / 19 | | | | | | 4 | 065636 |
| 14 | Goujon M6-84 / 12 | Pin M6-84 / 12 | Stift M6-84 / 12 | | | | | | | 103524 |
| 16 | Ecrou à embase HM6 | Shouldered nut HM6 | Schraubenmutter HM6 | 4 | 4 | 4 | 4 | 4 | 4 | ✚ |


● Lots de joints / Seal kit / Dichtungssatz

■ Kit de révision / Overhaul kit / Revision kit

✚ Lot visserie / Screw kit / Schraubensatz

Sous-ensemble B / Subassembly B / Gesamtplan B

Plan ensemble motorisation (M)
Motor assembly drawing (M)
Motor Gesamtplan (M)

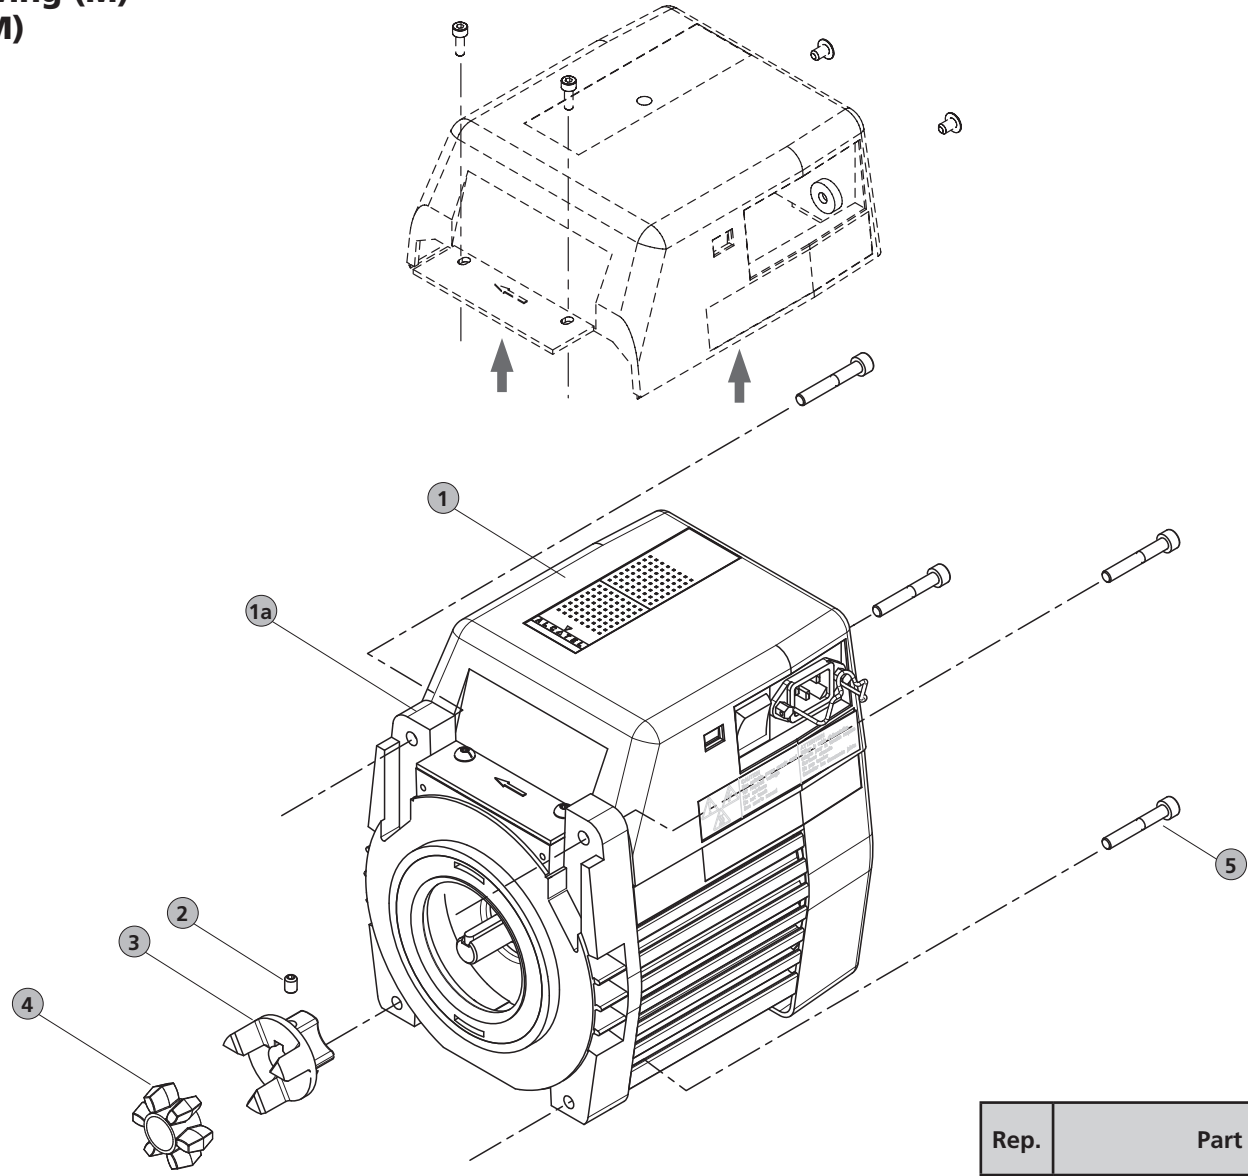

| Rep. | Part | Clamping torque (N·m) |
|------|-----------------------------|-----------------------|
| 5 | Screw CHc M6 x 40 (s.steel) | 9.5 |
| 2 | Screw Hc M6 x 8.8 (s.steel) | 2.5 |

Nomenclature ensemble motorisation (M) / Motor assembly part list (M) / Motor Gesamtheit Nomenklatur (M)

| MOTEUR UNIVERSEL / UNIVERSAL MOTOR / UNIVERSELLE MOTOR | | | | | |
|--|--|--|--|-----|----------------------------|
| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Qty | REF. P/N Bestell. Nr |
| 1 | Moteur monophasé standard avec interrupteur* | Single phase motor with on/off switch* | Wechselstrommotor* mit Schalter | 1 | 108694 |
| 1 | Moteur monophasé sans interrupteur* | Single phase motor without switch* | Wechselstrommotor* ohne Schalter* | 1 | 108698 |
| 1 | Moteur triphasé standard | Three-phase motor | Drehstrommotor | 1 | 108695 |
| 1 | Moteur monophasé Japon, basse tension, avec interrupteur* | Japanese single phase motor, LV, with on/off switch* | Niederspannung-Japan-Wechselstrommotor* mit Schalter | 1 | 1088025 |
| 1a | Kit d'adaptation pour moteur bride CEI (bride CEI + vis + 1/2 manchon + intercalaire) | CEI flange motor coupling kit (CEI flange + screw + motor side coupling+ plastic coupling) | CEI Klammer Motorflanschssatz (Klammer Motorflanschssatz + Schraube + Kupplugshälfte + Kupplungsstern) | 1 | 104558S |
| 2 | Vis Hc M6 x 8,8 | Screw Hc M6 x 8.8 | Schraube Hc M6 x 8,8 | 1 | ❖ |
| 3 | 1/2 Manchon moteur | Motor side coupling | Kupplungshälfte | 1 | 065742 |
| 4 | Intercalaire | Plastic coupling | Kupplungsstern | 1 | ■ |
| 5 | Vis CHc M6 x 40 | Screw CHc M6 x 40 | Schraube CHc M6 x 40 | 4 | ❖ |

* Moteur livré sans câble mais équipé avec 2+3+4

* Delivered without cable but equipped with 2+3+4

* ohne Netzkabel aber mit 2+3+4 einrichtet


● Lots de joints / Seal kit / Dichtungssatz

■ Kit de révision / Overhaul kit / Revision kit

❖ Lot visserie / Screw kit / Schraubensatz

| CÂBLE ÉLECTRIQUE POUR MOTEUR MONOPHASÉ / ELECTRICAL CABLE FOR SINGLE PHASE MOTOR / NETZKABEL FÜR WECHSELSTROMMOTOR (L = 2M) | | | |
|---|-----------------------|------------------------------------|----------------------------|
| DÉSIGNATION | SPECIFICATION | BENENNUNG | REF. P/N Bestell. Nr |
| USA (Basse tension) | USA (Low voltage) | Netzkabel (Niederspannung) (USA) | 103567 |
| USA (Haute tension) | USA (High voltage) | Netzkabel (Hochspannung) (USA) | 103898 |
| EUROPE | EUROPE | Netzkabel (EUROPA) | 103566 |
| JAPON (Basse tension) | JAPAN (Basse tension) | Netzkabel (Niederspannung) (JAPAN) | 103567 |
| JAPON (Haute tension) | JAPAN (Haute tension) | Netzkabel (Hochspannung) (JAPAN) | 104559 |
| ROYAUME UNI | UNITED KINGDOM | Netzkabel (GB) | 104411 |
| SUISSE (Coudé) | SWITZERLAND (elbow) | Netzkabel (SCHWEIZ) | A459212 |

Plan du système bulleur
Bubbler system drawing
Bubbler system Gesamtplan

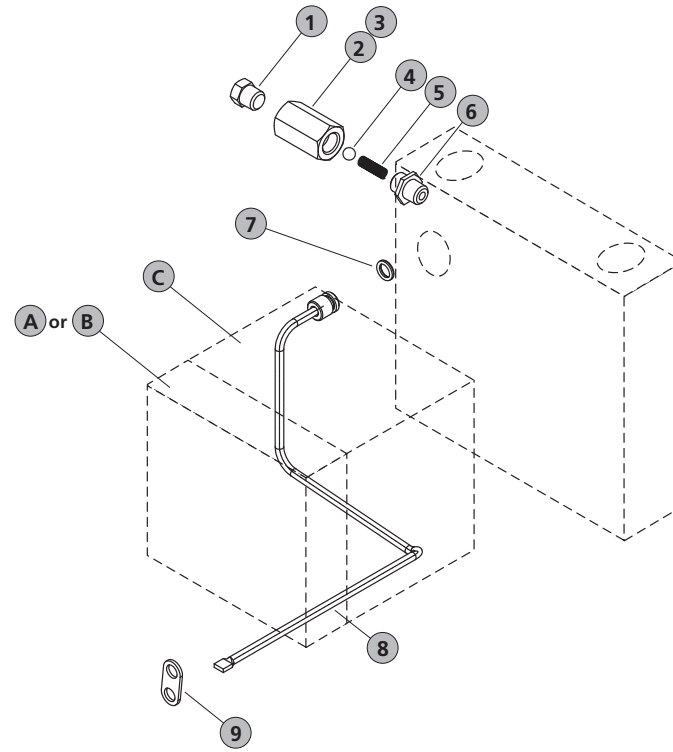

Nomenclature du système bulleur / Bubbler system part list / Bubbler system Nomenklatur

| REP | DÉSIGNATION | SPECIFICATION | BENENNUNG | Types/model | | | REF. P/N Bestell. Nr |
|-----|-----------------------------|--------------------------|------------------------|-------------|---------|---------|----------------------------|
| | | | | 2010 C2 | 2015 C2 | 2021 C2 | |
| 1 | Bouchon 1/8 NPT | Plug 1/8 NPT | Blindstopfen 1/8 NPT | 1 | 1 | 1 | 082926 |
| 2 | Manchon | Coupling | Kupplung | 1 | 1 | 1 | 065866 |
| 3 | Ruban teflon | Teflon band | Teflon band | 1 | 1 | 1 | 060975 |
| 4 | Bille inox 18/8 d. 5,8 | Ball 18/8 d. 5.8 | Kugel 18/8 d, 5,8 | 1 | 1 | 1 | 087593 |
| 5 | Ressort | Spring | Feder | 1 | 1 | 1 | 065149 |
| 6 | Raccord G 1/8 -1/8 NPT | Connector G 1/8 -1/8 NPT | Verbindungselement | 1 | 1 | 1 | 065867 |
| 7 | Joint torique c 1,9 - d 7,2 | O-ring c 1.9 - d 7.2 | Dichtung c 1,9 - d 7,2 | 1 | 1 | 1 | ● |
| 8 | Bulleur | Bubbler | Bubler | 1 | 1 | | 065836 |
| 8 | Bulleur | Bubbler | Bubler | | | 1 | 065835 |
| 9 | Attache tube | Tube fastener | Rohrbefestigung | 1 | 1 | 1 | 065835 |

● Lots de joints / Seal kit / Dichtungssatz


■ Kit de révision / Overhaul kit / Revision kit

⊛ Lot visserie / Screw kit / Schraubensatz

Remplacement des pièces du bloc fonctionnel non flasqué Pumping module (with no flanged stator) spare parts Pumpenblock (mit Stator und Flanschen) Unterhaltung Teile

Modèles 2 étages / 2 stage models / Zweistufige Modelle

| Modèle Model Modelle | Bloc fonctionnel / Pumping module / Pumpenblock | | | | | | | | |
|---|---|---|--|--|----|------------------------------------|------------------------------------|---|---------|
| | non flasqué / no flanged mit Stator und Flanschen | Référence P/N Bestell. Nr | flasqué / flanged mit Stator-Monoblock | Référence P/N Bestell. Nr | | | | | |
| 2005 C1 2010 C1 / C2 2015 C1 / C2 2021 C1 / C2 | Flasque avant (C) Front plate Einrichtet vorderer Flansche | 19 103396S | 26 | A006037S A006038S A006039S A006040S | + | 17 | - A332176 A332266 A332175 | | |
| 2005 I / SD / SDI 2010 I / SD 2015 I / SD 2021 I / SD | Flasque avant (standard) Front plate Einrichtet vorderer Flansche | 19 103401S | | A006001S A006000S A005999S A005997S | | | - A332176 A332266 A332175 | | |
| 2005 C1 2010 C1 / C2 2015 C1 / C2 2021 C1 / C2 | Flasque médian (C) Central plate Zwischenflansche | 29 103410S | | A006042S | | | + | 6 | A332166 |
| 2005 I / SD 2010 I / SD 2015 I / SD 2021 I / SD 2005 SDI * | Flasque médian (standard) Central plate Zwischenflansche | 29 103408S 105639 | | A005996S A006496S | | | | | |
| 2005 C1 2010 C1 / C2 2015 C1 / C2 2021 C1 / C2 2005 I / SD 2010 I / SD 2015 I / SD 2021 I / SD 2005 SDI * | Stator HP HP stator Hochdruckstator | 34 103409S 065722S | | A006042S A005996S A006496S | | | | | |
| 2005 I / SD / SDI 2005 C1 2010 I / SD 2010 C1 / C2 2015 I / SD 2015 C1 / C2 2021 I / SD 2021 C1 / C2 | Stator BP LP stator Niederdruckstator | 26 103507S 103512S 103510S 103393S | A006001S A006037S A006000S A006038S A005999S A006039S A005997S A006040S | + | 17 | - A332176 A332266 A332175 | | | |

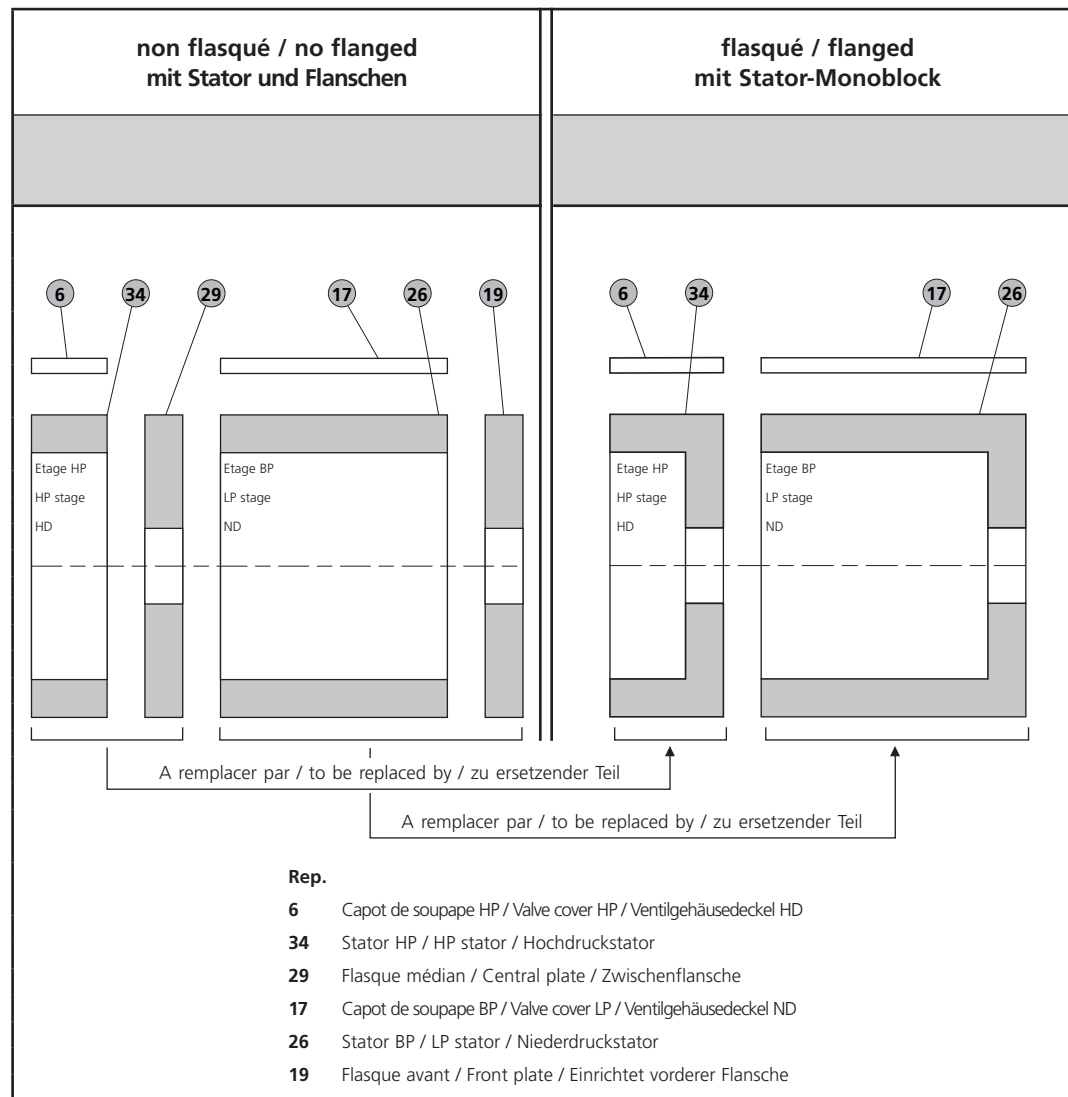

* Dans ce cas, changer également le rotor HP (31) (voir nomenclature du bloc fonctionnel avec stator flasqué (C) (page N-13)) et utiliser le kit de révision SDI (voir page 47).

* In this case, replace also HP rotor (31) (refer to pumping module with flanged stator (C) (page N-13)) and use a SDI Overhaul kit (see page 47).


* In diesem Fall ebenfalls den Hochdruckrotor (31) auswechseln (siehe Nomenklatur des Funktionsblocks mit geflanschem Stator (Alter N - 13)) und SDI-Revision kit verwenden (siehe Seite 47).

Remplacement des pièces du bloc fonctionnel non flasqué Pumping module (with no flanged stator) spare parts Pumpenblock (mit Stator und Flanschen) Unterhaltung Teile

Modèles 2 étages / 2 stage models / Zweistufige Modelle

| Modèle Model Modelle | Bloc fonctionnel / Pumping module / Pumpenblock | | | | | | | | |
|----------------------------|---|---------------------------------|---|----|----------|---|----|---------|---------|
| | non flasqué / no flanged mit Stator und Flanschen | | flasqué / flanged mit Stator-Monoblock | | | | | | |
| | Pièce à remplacer Part to be replaced Zu ersetzender Teil | Référence P/N Bestell. Nr | Référence P/N Bestell. Nr | | | | | | |
| 2005 C1 | Capot de soupape HP Valve cover HP Ventilgehäusedeckel HD | 6 | 103521 | 34 | A006042S | + | 6 | A332166 | |
| 2010 C1 / C2 | | | | | A005996S | | | | |
| 2015 C1 / C2 | | | | | A006496S | | | | |
| 2021 C1 / C2 | | | | | | | | | |
| 2005 I / SD | | | | | | | | | |
| 2010 I / SD | | | | | | | | | |
| 2015 I / SD | | | | | | | | | |
| 2021 I / SD | | | | | | | | | |
| 2005 SDI* | | | | | | | | | |
| 2005 I / SD / SDI | Capot de soupape BP Valve cover LP Ventilgehäusedeckel ND | 17 | 103523 | 26 | A006001S | + | 17 | - | |
| 2005 C1 | | | | | A006037S | | | | A332176 |
| 2010 I / SD | | | | | A006000S | | | | |
| 2010 C1 / C2 | | | | | A006038S | | | | |
| 2015 I / SD | | | | | A005999S | | | | |
| 2015 C1 / C2 | | | | | A006039S | | | | |
| 2021 I / SD | | | | | A005997S | | | | |
| 2021 C1 / C2 | A006040S | | | | | | | | |


- * Dans ce cas, changer également le rotor HP (31) (voir nomenclature du bloc fonctionnel avec stator flasqué (C) (page N-13)) et utiliser le lot de maintenance SDI (voir page 47).
- * In this case, replace also HP rotor (31) (refer to pumping module with flanged stator (C) (page N-13)) and use a SDI Overhaul kit (see page 47).
- * In diesem Fall ebenfalls den Hochdruckrotor (31) auswechseln (siehe Nomenklatur des Funktionsblocks mit geflanschem Stator (Alter N - 13)) und SDI-Revision kit verwenden (siehe Seite 47).

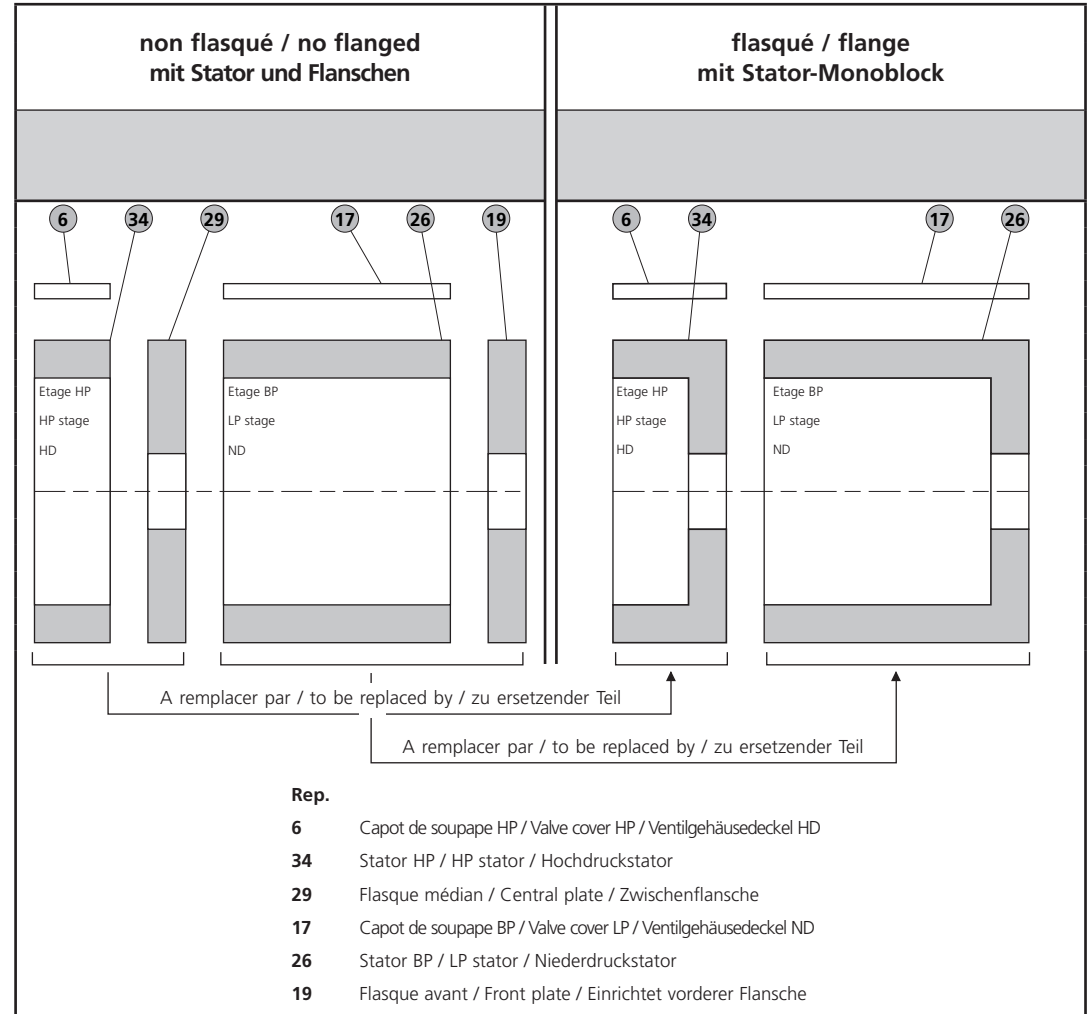

Remplacement des pièces, bloc fonctionnel non flasqué Pumping module (with no flanged stator) spare parts Pumpenblock (mit Stator und Flanschen) Unterhaltung Teile

Modèles 1 étage / 1 stage models / Einstufige Modelle

| Modèle Model Modelle | Bloc fonctionnel / Pumping module / Pumpenblock | | | |
|---|---|---------------------------------|---|-------------|
| | non flasqué / no flanged mit Stator und Flanschen | | flasqué / flanged mit Stator-Monoblock | |
| | Pièce à remplacer Part to be replaced Zu ersetzender Teil | Référence P/N Bestell. Nr | Référence P/N Bestell. Nr | |
| 1005 SD | Flasque avant (standard) Front plate | 19 103401S | 26 A006465S | + 6 A332166 |
| 1015 SD | Einrichtet vorderer Flansche | | 26 A006466S | |
| 1005 SD | Stator BP LP stator | 26 103409S | 26 A006465S | + 6 A332166 |
| 1015 SD | Niederdruckstator | | 26 A006466S | |
| 1005 SD | Capot de soupape BP Valve cover LP | 6 103521 | 26 A006465S | + 6 A332166 |
| 1015 SD | Ventilgehäusedeckel ND | | 26 A006466S | |
| Rep. 6 Capot de soupape / Valve cover / Ventilgehäusedeckel 26 Stator BP / LP stator / Niederdruckstator 19 Flasque avant / Front plate / Einrichtet vorderer Flansche | | | | |

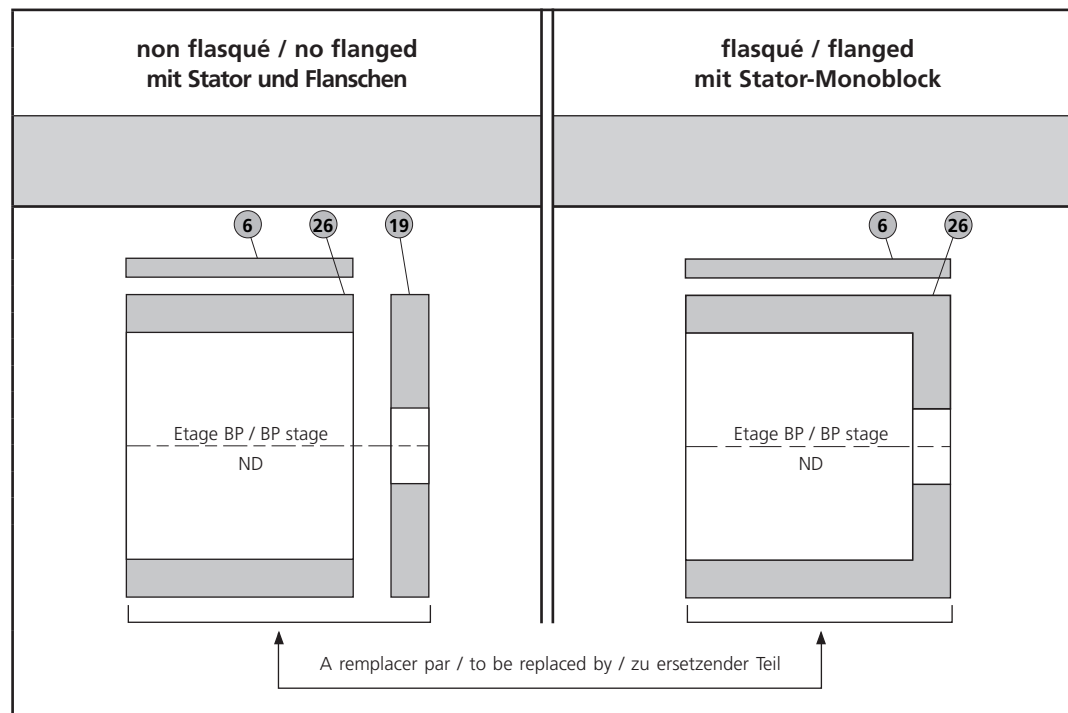

VACUUM SOLUTIONS FROM A SINGLE SOURCE

Pfeiffer Vacuum stands for innovative and custom vacuum solutions worldwide, technological perfection, competent advice and reliable service.

COMPLETE RANGE OF PRODUCTS

From a single component to complex systems:

We are the only supplier of vacuum technology that provides a complete product portfolio.

COMPETENCE IN THEORY AND PRACTICE

Benefit from our know-how and our portfolio of training opportunities!

We support you with your plant layout and provide first-class on-site service worldwide.



**Are you looking for a
perfect vacuum solution?
Please contact us:**

Chemtech Scientific provides access to this content as a courtesy.
We do not own the content contained in this document.
All rights and credit go directly to its rightful owners.
www.chemtechsci.com
Call us at: 484-424-9415

